



LCR METER IM3536


Component measuring instruments





One-eighth the precision variability and five times the measurement speed of legacy models means dramatically improved productivity.

High speed Stability

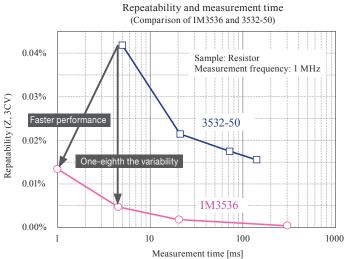

Raising the Bar for Basic Performance


High accuracy $\pm 0.05\%$ rdg.

High speed 1 ms (fastest time)



Guaranteed accuracy range from 1 m Ω

The IM3536 delivers a guaranteed accuracy range that starts at 1 m Ω . Furthermore, the frequency band has been expanded to 8 MHz, broadening the array of measurement targets with which it can be used compared to legacy products.

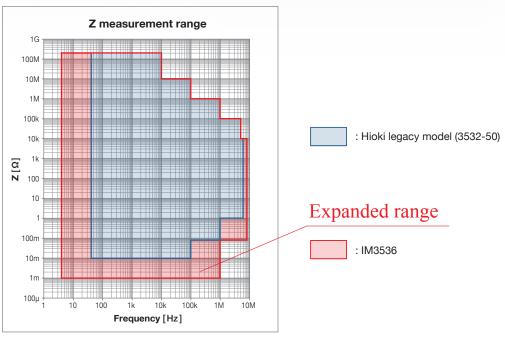


For more information about L and C measurable ranges, see page 14.



Low-impedance measurement with unmatched repeatability

The IM3536 delivers repeatability that is an order of magnitude better than that of previous products. This level of performance makes the instrument ideal for use in applications such as electrolytic capacitor low-ESR measurement and power supply coil impedance testing, the latter of which demands excellent frequency characteristics.

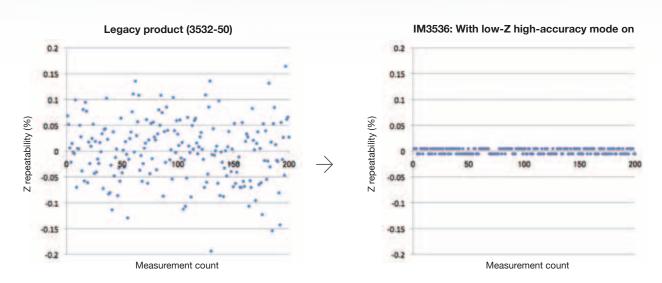

Graphs illustrate the results of measuring a resistance of 1 m Ω 200 times under the following conditions:

• Frequency: 1 kHz

 • Measurement speed: FAST • Measurement range: $100~\text{m}\Omega$



From measurement to analysis

Applications in development evaluation and research

Ideal for use in R&D work requiring a wide range of measurement conditions and for evaluation of devices under conditions of actual use

The IM3536 enables measurement conditions to be varied over a wide range, for example to analyze a coil's resonance point while varying the frequency or to perform measurement while changing the measurement signal during evaluation of a sample that exhibits signal dependency.

Variable frequency DC, 4 Hz to 8 MHz

Variable voltage

10 mV to 5 V
(V mode/CV mode)


Variable current $10\,\mu\text{A}$ to $100\,\text{mA}$ (CC mode)

Example of measurement while varying the frequency from 1 MHz to 8 MHz



The IM3536 ships standard with application software that can save measurement data as an Excel file while sweeping through a range of frequencies pre-configured on a computer.

For more information, see page 5.

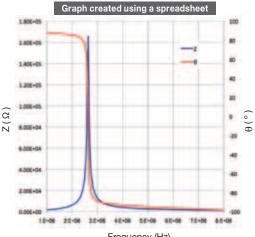


Frequency (Hz)

DC bias function: Measure under conditions simulating actual use or in accordance with industry standards

Internal DC bias (capacitor only)



A DC voltage can be superposed onto the measurement signal while measuring a capacitor.

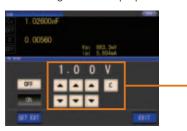

The generated voltage can be varied from 0 V to 2.50 V DC (10 mV resolution). (Low-Z high-accuracy mode: 0 V to 1 V)

External DC bias

(with support for L or C measurement, depending on the unit)



Requires a separate external DC bias power supply.

DC BIAS VOLTAGE UNIT 9268-10



Measurement frequency range: 40 Hz to 8 MHz Maximum applied voltage: ±40 V DC

DC BIAS CURRENT UNIT 9269-10



Measurement frequency range: 40 Hz to 2 MHz Maximum applied current: 2 A DC

* An internal 300µH inductance is connected in parallel to the DUT.

Calculate conductivity and the dielectric constant

The conditions used to calculate conductivity and the dielectric constant can be set easily using the instrument's touch screen.



Enter the following parameters: Conductor length (LENGTH) Conductor cross-sectional area (AREA)




The instrument's touch keypad makes it easy to enter numbers.

Evaluate samples that exhibit signal dependence using free application software

The bundled application allows you to save measurement data from the LCR meter as a Microsoft Excel or text file (CSV format) using the instrument's USB, LAN, GP-IB, or RS-232C interface.


Standard accessory

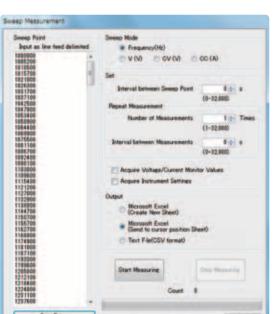

- Frequency characteristics (measurement while varying the frequency)
- Voltage characteristics (measurement while varying the voltage)
- Current characteristics (measurement while varying the current)
- Time interval measurement (measurement at a specified time interval)
- Capture measured value when the RETURN key is pressed (one-off measurement)

Simple, automatic configuration of sweep points

 Sweep points are generated automatically once you set the start value, end value, and number of intermediate data points.



Data saved in CSV format

	3416		6		
	A	8	0	0	- 63
1	Frequency(A	IC Statu	e Z	PH	
2	1000000		0 1.546+03	87.047	
3.	1005200		0 1.55E+03	87.919	
4	1010500		0 1:56E+03	67,932	
5	1015700		0 157E+03	87.901	
6	1021000		0 1 58E+03	87897	
7	1026300		0. 1.59E+03	87,895	
6	1031700		0 1.61E+03	87,882	
9	1037100		0 1.62E+03	87.871	
10	1042500		0 1.63E+03	87.87	
11	1047900		0 t 64E+03	87.859	
12	1053400		0 1 65 6+03	87.85	
12:	1058900		0 1.66E+03	87.841	
14	1064400		0 1.68E+03	87.833	
15.	1069900		0 1 69E+00	87.82	
16	1075500		0 1.70E+00	87.014	
17	1081100		0 1.71E+03	87 806	
18	1:086700		0 1 736+03	87,798	
19	1092400		0 1.74E+03	87.795	
20	1008100		0 1758+03	87.774	
21	1103800		0 1.76E+03	87,758	




Simplifying the process of building production lines Increase convenience and efficiency

Perform two jobs with one instrument to save space and speed up the process of building a system

Continuous measurement function

Suppose you wish to test power supply inductance L-Q at 1 kHz plus DC resistance (DCR). The IM3536 steps up by delivering high-speed, continuous measurement of different conditions with a single instrument.

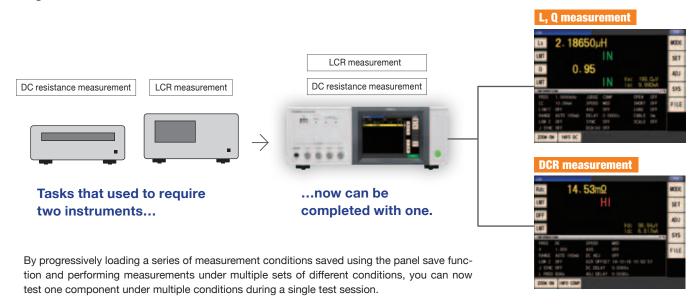

Display saved panels as a list and load them quickly

Panel save and load functions

Save and load measurement conditions and compensation values.

Ensure reliable application of settings during setup changes

Target A: Measurement conditions and judgment standards




- Measurement parameters: Ls, Q, Rdc
- Measurement frequency: 1 kHz
- Constant current: 1 mA



Target B: Measurement conditions and judgment standards

- ullet Measurement parameters: Z, ullet
- Measurement frequency: 1.5 kHz
- Constant current: 0.5 mA



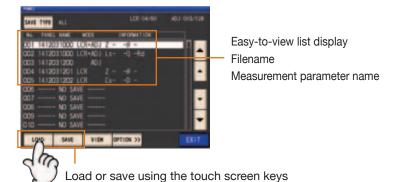


Analyze the data you need on a computer quickly and easily

Memory function and USB flash drive support



Save 32000 measurement results, copy them to a USB flash drive, and load them onto a computer. You can then open the measurement data using a spreadsheet to analyze variations and manage test data.

Even if both hands are full

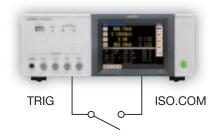

Select [External trigger] as the trigger setting and then control instrument operations such as measurement and saving of data from an external device such as a foot switch via the EXT. I/O terminal's TRIG signal.


Measure and save multiple test results Measure the test target. Save the results to the instrument's internal memory. Copy the saved data to a USB flash drive. Load the data onto a computer. Analysis using a spreadsheet

Improved protective functionality to reduce maintenance downtime

Residual charge protection function

The IM3536 features an enhanced residual charge protection function that is designed to protect the instrument's internal circuitry from a capacitor discharge voltage in the event a charged capacitor is inadvertently connected to a measurement terminal.

Relationship between the capacitance from which LCR meters can be protected and residual voltage values

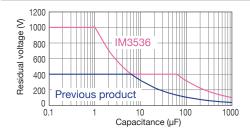




Functionality supporting more accurate measurement Delivering reliability for production-line testing

Compensate for anticipated errors

Cable length compensation

Select from cable length settings of 0 m, 1 m, 2 m, and 4 m, guaranteeing accuracy even when measurement cables have been extended.

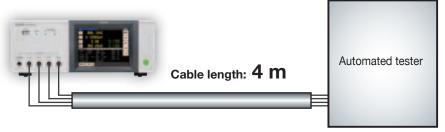



Up to five sets of compensation conditions can be saved.








Measured values are compensated according to the reference sample, ensuring compatibility of measured values from multiple devices on production lines and when swapping out devices, for example when a unit needs to be calibrated.

Low-Z high-accuracy mode for increasing the maximum applied current

When using low-Z high-accuracy mode, the output resistance changes to 10 Ω , allowing more current to flow to the sample being measured so that high-precision measurement is guaranteed.

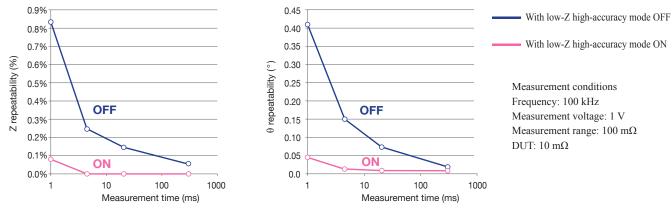


Low-Z high-accuracy mode can be used with the 100 m Ω , 1 Ω , and 10 Ω ranges.

This mode is especially effective when performing low-inductance L measurement of power supplies and ESR measurement of aluminum electrolytic capacitors.


Contact check function

Detect faulty contact with the sample during four-terminal measurement.

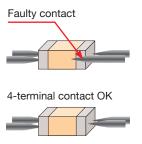


The contact check function measures the contact resistance between L_{POT} and L_{CUR} and between H_{POT} and H_{CUR} and displays an error if the readings are greater than or equal to a preset threshold.

 ${
m H}_{
m CUR}$ terminal: Current generation terminal ${
m H}_{
m POT}$ terminal: HI voltage detection terminal ${
m L}_{
m POT}$ terminal: LO voltage detection terminal ${
m L}_{
m CUR}$ terminal: Current detection terminal

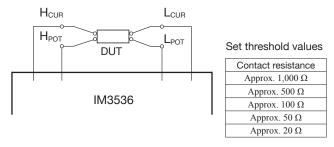


Hi-Z reject function

Detect contact errors during two-terminal measurement.

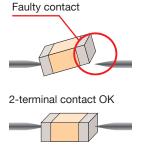

The Hi-Z reject function outputs an error if the measurement result exceeds a preset judgment standard. This capability enables the instrument to detect poor contact when performing measurement using a two-terminal fixture.

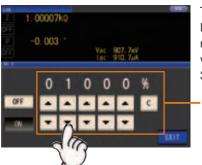



The judgment standard is calculated based on the measurement range and judgment reference value (valid setting range: 0% to 30,000%).

The instrument's touch keypad makes it easy to enter judgment reference values.

Improve measurement precision with the waveform averaging function

The IM3536's waveform averaging function lets you set the number of measured waveforms for each frequency band determined by the measurement speed setting (FAST, MED, SLOW, SLOW2).

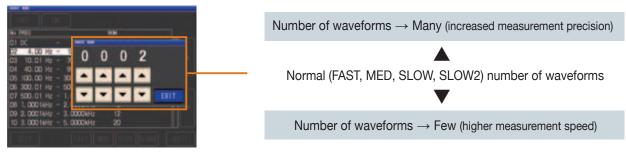

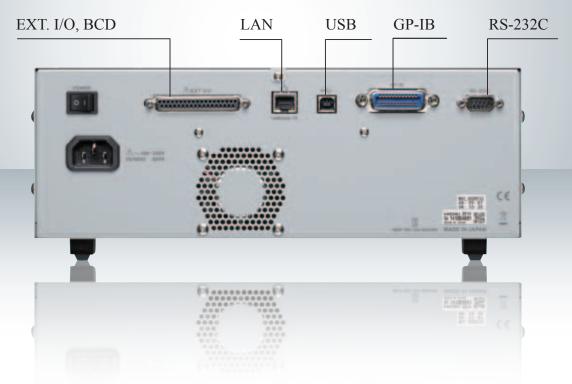


Access an extensive range of interfaces in all model variants

EXT. I/O

EXT. I/O allows you to output the measurement complete signal and judgment results signal and to control the instrument by inputting signals such as a measurement trigger signal. All signal lines are isolated from the instrument's measurement and control circuitry for maximum noise resistance.

■ Example of EXT I/O timing (LCR mode)

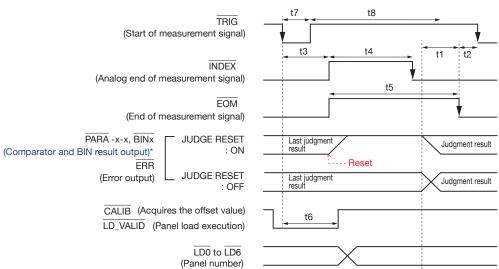

- *: PARAx-HI, PARAx-IN, PARAx-LO, AND, BINX, OUT_OF_BINS
 - tl: From Comparator, BIN Judgement Result to \overline{EOM} (LO): Setting value for delay time *1 (Settable range: 0.0000 s to 0.9999 s); $40 \mu \text{s}$
 - t2: From EOM width (LO) to TRIG (LO): Minimum time from end of measurement to next trigger *2; 400 µs
 - t3: From \overline{TRIG} (LO) to \overline{INDEX} (HI): Time from trigger to circuit response *3; 400 μs
 - t4: $\overline{\text{INDEX}}$ width (HI): Analog measurement time (=Minimum chuck time), switching chuck with $\overline{\text{INDEX}}$ (LO) is possible *4; 1 ms
 - t5: EOM width (HI): Measurement time *4; 1.5 ms
 - $t6: From \ \overline{TRIG} \ width \ (LO) \ to \ \overline{LD\text{-}VALID} \ (HI), \overline{CALIB} \ (HI): Time \ to \ panel \ load \ execution \ and \ DC \ adjustment \ request \ signal \ detection: \ at \ least \ t3$
 - t7: Trigger pulse width (LO time); At least 100 μs
 - t8: Trigger off (HI time) ; At least 100 μs
 - *1. There is an approximate error of 100 μs in the delay time entered for Judgement Result \leftrightarrow EOM for the setting value. t1 is the reference value for when the setting value is 0.0000 s.
 - *2. t2 is the reference value for when trigger input for during measurement is disabled.
 - *3. Additional time is required when loading panel numbers using the panel load function.
 - *4. Reference value for Measurement frequency: 1 kHz, Measurement speed: FAST, Range: HOLD

■ EXT. I/O signal list

Input signals

TRIG	: External trigger
LD0 to LD6	: Select panel number
LD_VALID	: Execute panel load
<u>C1</u>	: During BCD output, toggle between
$\overline{C2}$	high-order and low-order digits
	: During BCD output, toggle between
	the No. 1 and No. 3 parameters
CALIB	: DC adjustment request


Output signals

EOM	: End of measurement
INDEX	: End of capture
ERR	: Measurement error output
ISO_5V	: Isolated 5V power output
ISO_COM	: Isolated common signal ground

• Output signals (common signal line)

PARAx-HI, PARAx-IN, PARAx-LO (x=1,3), AND	: Comparator judgment result output
BIN1 to BIN10, OUT_OF_BINS	: BIN judgment result output
D1-0 to D1-3 D2-0 to D2-3 D3-0 to D3-3 D4-0 to D4-3	: BCD output signal

■ IM3536 connector signal assignment (LCR mode operation)

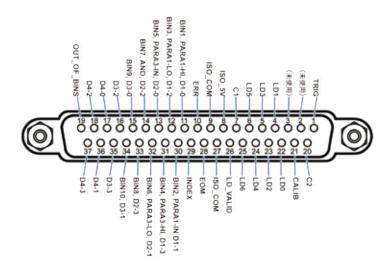

Signal assignment is different during continuous measurement mode. Signal logic is 0 V to 0.9 V for LO level and 5 V to 24 V for HI level.

■ Connectors

Connectors to use (unit side) : 37-pin D- sub female connector with #4-40 inch screws
Compliant connectors : DC-37P-ULR (solder type) and DCSP-JB37PR (pressure weld type)

For information on where to obtain connectors, consult your nearest HIOKI distributor.

■ Electrical specifications


Input signals	Input type	Optocoupler-isolated, non-voltage contact inputs (current sink, active-low) 0.9 V or less	
	Input asserted (on) voltage		
	Input de-asserted (off) voltage	OPEN or 5 V to 24 V	
	Input asserted (on) current	3 mA/ch	
	Maximum applied voltage	30 V	
Output signals	Output type	Isolated NPN open-collector outputs (current sink, active-low)	
	Maximum load voltage	30V	
	Maximum output current	50 mA/ch	
	Residual voltage	1 V (10 mA), 1.5 V (50 mA)	
Internally isolated	Output voltage	4.5 V to 5.0 V	
power supply	Maximum output current	100 mA	
	External power input	none	

BCD

LCR mode output signals operate in two modes: judgment mode and BCD mode. In BCD mode, measured values for the No. 1 parameter and the No. 3 parameter are output using the BCD signals. *LCR mode only

The BCD high-order digit and low-order digit (polarity and ERR information) can be switched with the C1 signal.

C1	D4	D3	D2	D1
HI (high-order)	No. 6 digit data	No. 5 digit data	No. 4 digit data	No. 3 digit data
LO (low-order)	No. 2 digit data	No. 1 digit data	Polarity	ERR

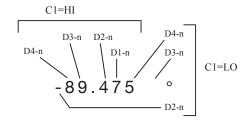

Interfaces

Control the instrument with communication commands from a computer via the USB, LAN, GP-IB, or RS-232C interfaces.

USB

Connector	USB Type B receptacle
Electrical specifications	USB2.0 (High Speed)

GP-IB

Connector	24-pin Centronics type connector
Standard	IEEE-488.1 1987
Reference standard	IEEE-488.2 1987
Terminator	LF, CR+LF

LAN

Connector	RJ-45 connector	
Transmission method	10Base-T/100Base-T automatic detection	
Protocol	TCP/IP	

RS-232C

Connector	D-sub 9-pin connector
Flow control	Hardware/Software
Transmission speed	9600 bps, 19200 bps, 38400 bps, 57600 bps

Measurement parameters and measurement conditions

Measurement parameters	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$			
Display range	$\begin{array}{cccccccccccccccccccccccccccccccccccc$			
Measurable range	$1~\text{m}\Omega$ to $200~\text{M}\Omega$			
Output impedance	Normal mode: $100~\Omega$, Low impedance high accuracy mode: 10Ω			
Range	4 Hz to 8 MHz			
Measurement frequency Resolution	4.00 Hz to 999.99 Hz			
Accuracy	$\pm 0.01\%$ of setting or less			
Measurement signal level [V mode] [CV mode]	[Normal mode] 4 Hz to 1.0000 MHz: 10 mV to 5 V (maximum 50 mA) 1.0001 MHz to 8 MHz: 10 mV to 1 V (maximum 10mA) [Low impedance high accuracy mode] 4 Hz to 1.0000 MHz: 10 mV to 1 V (maximum 100 mA)			
Resolution	10 mV to 1.000 V 1 mV steps			
Measurement Range signal level [CC mode]	[Normal mode] 4 Hz to 1.0000 MHz: 10 µA to 50 mA (maximum 5 V) 1.0001 MHz to 8 MHz: 10 µA to 1 mA (maximum 1 V) [Low impedance high accuracy mode] 4 Hz to 1.0000 MHz: 10 µA to 100 mA (maximum 1 V)			
Resolution	10 μA steps			
Monitor function	Monitor voltage range: 0.000 V to 5.000 V Monitor current range: 0.000 mA to 100.0 mA			
DC resistance measurement	Measurement signal level: Fixed at 1 V			
DC bias measurement	Generating range: DC voltage 0 V to 2.50 V (10mV resolution) In low Z high accuracy mode: 0 V to 1 V (10 mV resolution)			

Measurement modes

LCR mode

	Bin measurement: 10 categories for 2 measurement parameters Judgment method: Set as absolute values, percentage, or deviation percentage
Measurements	Comparator measurement: Hi, IN, and Lo judgments for 2 parameters Judgment method: Set as absolute values, percentage, or deviation percentage
Display	Zoom display function: Enlarged display of measured values Number of display digits setting: Allows you to set the number of display digits for measured values for each measurement parameter. (Valid setting range: 3 to 6 digits)

Continuous measurement mode

Measurements	Performs continuous measurement using measurement condi- tions that have been saved using the panel save function. Measurement is started by an external trigger (any of the three types described below)	
Maximum number of measurements	60	

Speed and accuracy

Measurement speed	FAST/MED/SLOW/SLOW2
Averaging	Valid setting range: 1 to 256 (in steps of 1)
Basic accuracy	Z: 0.05% rdg. θ: 0.03° (representative value)
Guaranteed accuracy range	1 mΩ to 200 MΩ (impedance)
Guaranteed accuracy period	1 year
Warm-up time	60 minutes
Terminal structure	4-terminal structure

Supplementary functionality

Trigger function	Uses a specific signal to time the start of measurement. [Trigger types] Internal trigger: Automatically generates a trigger signal internally to repeat measurement. External trigger: Allows you to control the instrument's measurement operation by inputting a trigger signal from an external device (trigger sources: manual, communications commands, EXT. I/O). [Trigger delay] Sets the delay time from trigger input to measurement. Setting range: 0.0000 s to 9.9999 s [Trigger synchronous output] Outputs the measurement signal after trigger input and applies it to the sample during measurement only. Allows you to set a wait time until data is acquired. Setting range: 0.0000 s to 9.9999 s
Compensation function	[Open/short compensation] [Load compensation] Number of sets of compensation conditions: Up to 5 [Cable length compensation] Cable length settings: 0 m, 1 m, 2 m, 4 m [Correlation compensation] Compensation of display values based on user-input compensation coefficient
Contact check	$\label{eq:local_equation} \begin{tabular}{l} $[4$-terminal contact check] \\ Performs a contact (disconnection) check between H_{CUR} and H_{POT} and between L_{CUR} and L_{POT}. \\ [High-Z reject function] \\ Detection of OPEN state during 2-terminal measurement. \\ \end{tabular}$

Recording and interface

Memory function	Measurement result items (maximum 32000 items) can be saved to the instrument. Memory can be read using communications commands or a USB flash drive.			
Panel save and load functions	Measurement conditions: Up to 60 Compensation values: Up to 128			
Interfaces	EXT. I/O(HANDLER) ,USB, USB flash drive, LAN, GP-IB, RS-232C			
BCD output	[Output from EXT. I/O connector] Generates BCD output for the No.1 and No.3 parameter measured values. *Input and output signals are set to BCD mode (selection with judgment output).			

Display and sound

Key lock function	Lock operation of the instrument using the touch screen. Unlock by entering a passcode.	
Beep tone	Enable or disable for judgment results and key operation.	
Display settings	LCD display on/off Off: The display turns off 10 sec. after the touch panel is last touched.	
Display	5.7-inch color TFT with touch panel	

Other

Other	
Operating temperature and humidity	0°C to 40°C (32°F to 104°F), 80% RH, non-condensing
Storage temperature and humidity	-10°C to 50°C (14°F to 122°F), 80% RH, non-condensing
Operating environment	Indoors, Pollution Degree 2, altitude up to 2000 m (6562-ft.)
Power supply and maximum rated power	100 V AC to 240 V AC (50/60 Hz), 50 VA
Dielectric strength	1.62 kV AC for 1 min. between power line and ground line
Standards compliance	EMC: EN 61326, EN 61000 Safety: EN 61010
Dimensions and Mass	Approx. 330 W × 119 H × 230 D mm (12.99 W × 4.69 H × 9.06 D in) , approx. 4.2 kg (148.1 oz.)
Accessories	Power cord ×1, Instruction manual ×1, I. CR application disc (Communications user manual) ×1

Measurement accuracy

Measurement accuracy is calculated based on the following equation: Measurement accuracy = Basic accuracy \times C \times D \times E \times F \times G

[C: Level coefficient] V: Setting value (corresponds to when V mode) [V]

Measurement level	1 V				
Coefficient (DC resistance mea	1				
Measurement level 0.010 V to 0.999 V				V	1.001

Measurement level	0.010 V to 0.999 V	1 V	1.001 V to 5 V
Coefficient (AC measurement)	1+0.2/V	1	1+0.2/V

[D: Measurement speed coefficient]

Measurement speed		FAST	MED	SLOW	SLOW2
		4	3	2	1
	AC measurement	8	4	2	1

Basic accuracy

Accuracy is calculated based on coefficients A and B from the basic accuracy chart shown below.

1 kΩ range or higher

100 Ω range or lower

Basic accuracy=
$$\pm \left(A+B \times \left| \begin{array}{c} 10 \times Zx \\ \hline Range \end{array} - 1 \right| \right)$$
 Basi

Basic accuracy=
$$\pm \left(A+B\times \left| \frac{Range}{Zx} -1 \right| \right)$$

Zx: Impedance of the measurement conductor

A: Noted in basic accuracy chart. (Upper value: Z accuracy [% rdg.]; lower value: θ accuracy [°])

B: Noted in basic accuracy chart. (Upper value: Z accuracy [% rdg.]; lower value: θ accuracy [°])

A is the accuracy of R when DC (± % rdg.)

B is the coefficient for the resistance of the sample

Conditions Temperature and humidity ranges: 23°C ± 5°C, 80% RH or less (no condensation),

[E: Measurement cable length coefficient]

Coefficient	0 m	1 m	2 m	4 m
Coefficient	1	1.5	2	3

Settable range for frequency

0 m: Up to 8 MHz, 1 m: 8 MHz, 2 m: Up to 2 MHz, 4 m: Up to 1MHz

[F: DC bias coefficient]

DC bias coefficient	OFF	ON
Coefficient	1	2

[G: Temperature coefficient]

Operating temperature	t [°C]
Coefficient	1+0.1× t-23

at least 60 minutes after power ON, after performing open and short compensation

When the operating temperature (t) is 23°C±5°C, use a coefficient of 1.



Free software for calculating accuracy

(LCR application disc)

Automatically calculate measurement accuracy based on user-entered measurement conditions and measurement results. Free download from the Hioki website.

Basic accuracy

Dasic ac	odiacy														
Range	Range Guaranteed ac- curacy rang DC		4Hz to 99.99Hz		100Hz to 999.99Hz		1kHz to 10kHz		10.001kHz to 100kHz		100.01kHz to 1MHz		1.0001MHz to 8MHz		
100ΜΩ	8MΩ to 200MΩ	A=1	B=1	A=6 A=5	B=5 B=3	A=3 A=2	B=2 B=2	A=3 A=2	B=2 B=2						
10ΜΩ	800kΩ to 10MΩ	A=0.5	B=0.3	A=0.8 A=0.8	B=1 B=0.5	A=0.5 A=0.4	B=0.3 B=0.2	A=0.5 A=0.4	B=0.3 B=0.2	A=2 A=2	B=1 B=1				
1ΜΩ	80kΩ to 1MΩ	A=0.2	B=0.1	A=0.4 A=0.3	B=0.08 B=0.08	A=0.3 A=0.2	B=0.05 B=0.02	A=0.3 A=0.2	B=0.05 B=0.02	A=0.5 A=0.6	B=0.1 B=0.1	A=3 A=3	B=0.5 B=0.5		
100kΩ	8kΩ to 100kΩ	A=0.1	B=0.01	A=0.3 A=0.2	B=0.03 B=0.02	A=0.2 A=0.1	B=0.03 B=0.02	A=0.2 A=0.1	B=0.03 B=0.02	A=0.25 A=0.2	B=0.04 B=0.02	A=1 A=1	B=0.3 B=0.3	A=2 A=2	B=0.5 B=0.3
10kΩ	800Ω to 10kΩ	A=0.1	B=0.01	A=0.3 A=0.3	B=0.03 B=0.01	A=0.2 A=0.1	B=0.02 B=0.02		B=0.02 B=0.02	A=0.3 A=0.2	B=0.02 B=0.02	A=0.5 A=0.5	B=0.05 B=0.05	A=2 A=1.5	B=0.5 B=0.3
1kΩ	80Ω to 1kΩ	A=0.1	B=0.01	A=0.3 A=0.2	B=0.02 B=0.02	A=0.2 A=0.1	B=0.02 B=0.02	A=0.2 A=0.1	B=0.02 B=0.02	A=0.2 A=0.15	B=0.02 B=0.02	A=0.4 A=0.4	B=0.02 B=0.02	A=1.5 A=1.5	B=0.2 B=0.2
100Ω	8Ω to 100Ω	A=0.1	B=0.02	A=0.3 A=0.2	B=0.02 B=0.01	A=0.2 A=0.15	B=0.02 B=0.01	A=0.2 A=0.1	B=0.02 B=0.01	A=0.2 A=0.15	B=0.02 B=0.02	A=0.5 A=0.5	B=0.03 B=0.03	A=1.5 A=1.5	B=0.2 B=0.2
10Ω	800mΩ to 10Ω	A=0.2	B=0.15	A=0.5 A=0.3	B=0.1 B=0.1	A=0.4 A=0.3	B=0.05 B=0.03	A=0.4 A=0.3	B=0.05 B=0.03	A=0.4 A=0.3	B=0.05 B=0.03	A=0.8 A=0.5	B=0.1 B=0.05	A=2 A=2	B=1.5 B=1
1Ω	80mΩ to 1Ω	A=0.3	B=0.3	A=1.5 A=0.8	B=1 B=0.5	A=1 A=0.5	B=0.3 B=0.2	A=1 A=0.5	B=0.3 B=0.2	A=1 A=0.5	B=0.3 B=0.2	A=1.5 A=0.7	B=1 B=0.5	A=3 A=3	B=3 B=2
100mΩ	1mΩ to 100mΩ	A=1	B=1	A=8 A=5	B=8 B=4	A=5 A=3	B=4 B=2	A=3 A=2	B=2 B=1.5	A=2 A=2	B=2 B=1.5	A=4 A=3	B=3 B=4		

Method of determining basic accuracy

- Calculate the basic accuracy from the sample impedance, measurement range, and measurement frequency and the corresponding basic accuracy A and coefficient B from the table above.
- The calculation expression to use differs for each of the 1 $k\Omega$ range and above and 100 Ω range and below.
- For C and L, obtain basic accuracy A and coefficient B by determining the
 measurement range from the actual measurement value of impedance or the
 approximate impedance value calculated with the following expression.

$$\begin{split} Zx &(\Omega) \ \dot{=} \ \omega L \ (H) \ \ (\theta \ \dot{=} \ 90^\circ) \\ & \ \dot{=} \ \frac{1}{\omega C \ (F)} \ \ (\theta \ \dot{=} \ -90^\circ) \\ & \ \dot{=} \ R \ (\Omega) \ (\theta \ \dot{=} \ 0^\circ) \quad (\omega: 2 \ x \ \pi \ x \ \text{Measurement frequency [Hz]}) \end{split}$$

Calculation example

Impedance Zx of sample: 500 Ω (actual measurement value) Measurement conditions: When frequency 10 kHz and range 1 k Ω

Insert coefficient A=0.2 and coefficient B=0.02 for the Z basic accuracy from the table above into the expression.

Z basic accuracy =
$$0.2 + 0.02 \times \left| \frac{10 \times 500}{10^3} - 1 \right| = 0.28 \ (\pm \% rdg.)$$

Similarly, insert coefficient A=0.1 and coefficient B=0.02 for the θ basic accuracy, as follows:


$$\theta$$
 basic accuracy = 0.1 + 0.02 x $\left| \frac{10 \times 500}{10^3} - 1 \right| = 0.18 \text{ (\pm deg.)}$

Guaranteed accuracy measurement level range

The range of measurement levels for which accuracy is guaranteed varies with the setting conditions.

			1	_		1		Tarantoca varios vita	
Range	Sample's impedance	DC	4 Hz to 99.99 Hz	100 Hz to 999.99 Hz	1 kHz to 10 kHz	10.001 Hz to 100 kHz	100.01 kHz to 1 MHz	1.0001 MHz to 5 MHz	5.0001 MHz to 8 MHz
$100\ \text{M}\Omega$	8 MΩ to 200 MΩ								
10 ΜΩ	10 MΩ to 100 MΩ			0.101 V to 5 V			_		
10 10152	800 kΩ to 10 MΩ					0.501 V to 5 V			
1 ΜΩ	1 MΩ to 10 MΩ					0.501 V to 5 V			
1 10122	80 kΩ to 1 MΩ			0.050 V to 5 V		0.101 V to 5 V	0.501 V to 5 V		
100 kΩ	100 kΩ to 1 MΩ	_		0.030 V to 5 V		0.101 V 10 5 V	0.501 V to 5 V		
100 KS2	8 kΩ to 100 kΩ	ed	1V (fixed)					0.101 V to 1 V	
10 kΩ	10 kΩ to 100 kΩ						0.050 V to 5 V	0.101 V 10 1 V	
10 K22	800 Ω to 10 kΩ	≥		0.010	V to 5 V		0.050 V to 5 V		
1 kΩ	1 kΩ to 10 kΩ			0.010	V 10 5 V			0.050 V to 1 V	0.101 V to 1 V
1 KS2	80 Ω to 1 kΩ						0.030 V to 1 V	0.101 V to 1 V	
100 Ω	8 Ω to 100 Ω								
10 Ω	800 mΩ to 10 Ω			0.050	V to 5 V			0.101	V to 1 V
1 Ω	80 mΩ to 1 Ω			0.050	V 10 3 V		0.101 V to 5 V	0.501	V to 1 V
100 mΩ	1 mΩ to 100 mΩ			0.101	V to 5 V		0.501 V to 5 V		

Measurable ranges

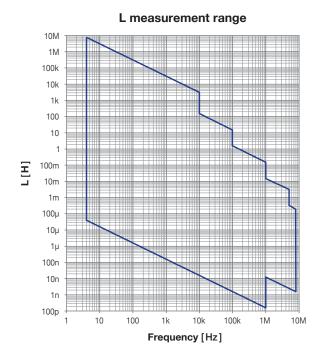

C measurement range

Note: Test fixtures are not supplied with the instrument. Select optional test fixtures or probes when ordering.

LCR METER IM3536

Standard accessories

- Power Cord
- Instruction manual
- LCR Application Disc (Communication commands user manual)



Free software for calculating accuracy

(LCR application disc)

Automatically calculate measurement accuracy based on user-entered measurement conditions and measurement results. Free download from the Hioki website.

DC BIAS CURRENT UNIT 9269-10

Options

 
RS-232C CABLE 9637

GP-IB CONNECTOR CABLE 9151-02



DC BIAS VOLTAGE UNIT 9268-10







2 m (6.56 ft) length



Measurement frequency range: 40 Hz to 8 MHz Maximum applied voltage: ±40 V DC



Measurement frequency range: 40 Hz to 2 MHz Maximum applied current: 2 A DC

 * An internal 300 μH inductance is connected in parallel to the DUT.

Probes and Test Fixtures for Lead Components



4-TERMINAL PROBE L2000

Measurable range: DC to 8 MHz Measurable terminal diameter: 0.3 mm (0.01 in) to 5 mm (0.2 in) Cord length: 1 m (3.28 ft)



TEST FIXTURE 9262

Measurable range: DC to 8 MHz Measurable terminal diameter: 0.3 mm (0.01 in) to 2 mm (0.08 in) Direct connection type



4-TERMINAL PROBE 9140-10

Measurable range: DC to 200 kHz Measurable terminal diameter: 0.3 mm (0.01 in) to 5 mm (0.2 in) Cord length: 1 m (3.28 ft)



TEST FIXTURE 9261-10

Measurable range: DC to 8 MHz Measurable terminal diameter: 0.3 mm (0.01 in) to 1.5 mm (0.06 in) Cord length: 1 m (3.28 ft)



4-TERMINAL PROBE 9500-10

Measurable range: DC to 200 kHz Measurable terminal diameter: 0.3 mm (0.01 in) to 2 mm (0.08 in) Cord length: 1 m (3.28 ft)

Test Fixtures for SMDs



PINCHER PROBE L2001

Measurable range: DC to 8 MHz Replaceable tips Measurable sample sizes: IM9901: 0603 to 2220 (EIA) 1608 to 5750 (JIS) IM9902: 0201 to 2220 (EIA) 0603 to 5750 (JIS) Cord length: Approx. 730 mm (28.74 in) *Ships standard with one set of IM9901



SMD TEST FIXTURE 9263

Measurable range: DC to 8 MHz For SMD with electrodes on side Measurable sample sizes: 0805 to 2220 (EIA) 2012 to 5750 (JIS) Direct connection type



CONTACT TIPS IM9901



CONTACT TIPS IM9902

For more information, please see individual product catalogs.



SMD TEST FIXTURE 9677

Measurable range: DC to 120 MHz For SMD with electrodes on side Measurable sample sizes: 0402 to 0603 (EIA) 1005 to 1608 (JIS) Direct connection type



SMD TEST FIXTURE IM9100

Measurable range: DC to 8 MHz For SMD with electrodes on bottom Measurable sample sizes: 01005 to 0402 (EIA) 0402 to 1005 (JIS) Direct connection type



SMD TEST FIXTURE 9699

Measurable range: DC to 120 MHz For SMD with electrodes on bottom Measurable sample sizes: 0608 to 0805 (EIA) 1608 to 2012 (JIS) Direct connection type

For more information, please see individual product catalogs.

LCR Meter Series Full Product Lineup

Model	Measurement (Basic valu		Measurement frequency range									
WIOGOI					Applica	tions and m	neasurement o	bject		_		
LCR METER IM3536		1ms	O O	41					8MHz			
						r up to 8 MHz ents such as	capacitors and inc	ductors				
LCR METER		2ms	DC	1mHz			2	00kHz		_		
IM3533	IM3533 IM3533-01		induct	ance			sformers including 3 and IM3533 with			_		
LCR METER		2ms	DC O		40H	z	2	00kHz				
IM3523			autom For C	ated mach	inery R measure		r production lines	_	-			
LCR HITESTER		5ms				120Hz	1kHz					
3511 -50						ngle function inum electroly	rtic capacitors	1 1	1 1	_		
C METER	8	1.5ms					1kHz	1MF	łz	_		
3506-10					apacity ca	pacitors I film capacito	rs			_		
C HiTESTER		2ms				120Hz	1kHz			_		
3504	3504-40 3504-50 3504-60		For so	rting mach	-capacity N ines of larg ines (3504	e-capacity MI	LCCs (3504-50/60)			_		
IMPEDANCE ANALYZER		0.5ms						1MH	z 30	00M		
IM7580			High-frequency measurement up to 300 MHz Ideal for production lines of ferrite beads and inductors									
IMPEDANCE ANALYZER		0.5ms	DC O	41	lz				5MHz	_		
IM3570			Measi	ure the fred			alyzer piezo-electric de	vices, funct	ional polymer	r		
CHEMICAL IMPEDANCE		2ms		1mHz			2	00kHz		_		
ANALYZER IM3590	-		Measu				Cole-Cole plots and als, batteries, and e					

HIOKI

HIOKI (Shanghai) SALES & TRADING CO., LTD. TEL +86-21-63910090 FAX +86-21-63910360 http://www.hioki.cn / E-mail: info@hioki.com.cn

DISTRIBUTED BY

HIOKI E.E. CORPORATION

HEADQUARTERS

HEADQUARTERS
81 Koizumi, Ueda, Nagano, 386-1192, Japan
TEL +81-268-28-0562 FAX +81-268-28-0568
http://www.hioki.com/E-mail: os-com@hioki.co.jp
TEL +65-6634-7677 FAX +65-6634-7477
E-mail: info-sg@hioki.com.sg

HIOKI INDIA PRIVATE LIMITED

TEL +91-124-6590210 FAX +91-124-6460113
E-mail: hioki@hioki.in

HIOKI USA CORPORATION

 HIOKI USA CORPORATION
 HIOKI KOREA CO., LTD.

 TEL +1-609-409-9109
 FAX +1-609-409-9108
 TEL +82-42-936-1281
 FAX +82-42-936-1284

 http://www.hiokiusa.com/ E-mail: hioki@hiokiusa.com
 E-mail: hioki@hiokiusa.com
 E-mail: hioki@hiokiusa.com