
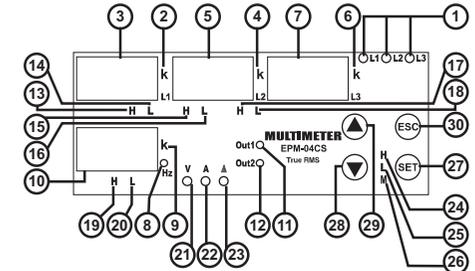


MULTIMETER EPM-04 / 04C / 04CS

INDEX

Precautions for Installation and Safe Usage.....1
 Front Panel and Usage of Buttons.....1
 General Information and Applications.....1
 Using the Buttons.....2
 Transformer Menu (Tr ftn / Ltr / CoreEClon).....2
 User Password Settings (Pin Menu).....2
 Activating the User Password (Pin Act Menu).....2
 Changing the User Password (Pin Chg Menu).....2
 Output Setting Menu.....2
 Current Setting Menu (SP Current Menu).....3
 High/Low Current Settings (SP Cur Hi, SP Cur Lo Menu).....3
 Hysteresis Settings for High/Low Currents (I-H Hys, I-L Hys Menu).....3
 Delay-on Time for High/Low Currents (I-H ond, I-L ond Menu).....3
 Delay-off Time for High/Low Currents (I-H ofd, I-L ofd Menu).....3
 Start and Auto Function (StArt dEL and Auto rSt Menu).....4
 Instant Trip Function (CUr inSt rTP Menu).....4
 Voltage Setpoint Menu (SP Volt Menu).....4
 High/Low Voltage Settings (SP UoL Hi, SP UoL Lo Menu).....4
 Hysteresis Settings for High/Low Voltages (U-H Hys, U-L Hys Menu).....5
 Delay-on Time for High/Low Voltages (U-H ond, U-L ond Menu).....5
 Delay-off Time for High/Low Voltages (U-H ofd, U-L ofd Menu).....5
 Frequency Menu.....6
 High/Low Frequency Settings (Frq Hi, Frq Lo Menu).....6
 Hysteresis Settings for High/Low Frequencies (F-H Hys, F-L Hys).....6
 Delay-on / Delay-off Time for High/Low Frequencies (Frq ond, Frq ofd).....6
 Phase Sequence (Voltage Sequence Menu) and Instant Trip (UoL inSt rTP Menu) Menu.....6
 Erasing the Max., Min. and Max. Demand Values (Reset Menu).....6
 Demand Time for Demand and Max. Demand (dE tM Menu).....7
 Communication Menu (RS-485).....7
 Technical Features and Default Factory Settings.....7
 Connection Diagram.....8
Output, SP Current and SP Volt menus are available for EPM-04C/04CS; RS-485 menu is available for EPM-04CS.

PRECAUTIONS FOR INSTALLATION AND SAFE USE
 In CT-25 (120A) compliant models, only CT-25 current transformer must be used.
 Other type of CT's have a high risk to damage to device.
 Failure to follow those instructions will result in death or serious injury.
 - Disconnect all power before working on equipment.
 - When the device is connected to the network, do not remove the front panel.
 - Do not try to clean the device with solvent or the like. Only clean with dry cloth.
 - Verify correct terminal connections when wiring.
 - Electrical equipment should be serviced only by your component seller.
 - Only for rack panel mounting.
 - Fuse must be F type and limit value doesn't exceed 1A.
 - No responsibility is assumed by manufacturer or any of its subsidiaries for any consequences arising out of the use of this material.

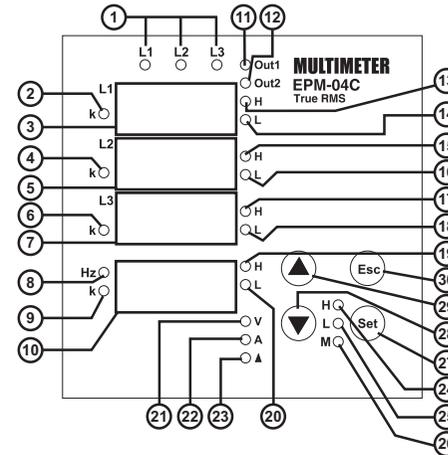


- 1 Phase LEDs. The LEDs turn on when the voltage value, which is applied to one of the current inputs, reach 30 V
- 2 First display's k LED (for L1). Measurement parameter is the unit of kilo when LED is turned on. ie: kA, kV
- 3 Display for L1.
- 4 Second display's k LED (for L2). Measurement parameter is the unit of kilo when LED is turned on. ie: kA, kV
- 5 Display for L2.
- 6 Third display's k LED (for L3). Measurement parameter is the unit of kilo when LED is turned on. ie: kA, kV
- 7 Display for L3.
- 8 Displays network frequency when Hz LED is turned on.
- 9 K LED for neutral current. Measurement parameter is displayed in unit of kilo when this LED is turned on.
- 10 Display for neutral current and frequency (for EPM-04C/04CS).
- 11 First warning output LED (Out1). Turned on when the output is activated.
- 12 Second warning output LED (Out2). Turned on when the output is activated.
- 13 Over current / voltage warning output for L1. (EPM-04C/04CS)
- 14 Low current / voltage warning output for L1. (EPM-04C/04CS)
- 15 Over current / voltage warning output for L2. (EPM-04C/04CS)
- 16 Low current / voltage warning output for L2. (EPM-04C/04CS)
- 17 Over current / voltage warning output for L3. (EPM-04C/04CS)
- 18 Low current / voltage warning output for L3. (EPM-04C/04CS)
- 19 Over current / frequency warning output for frequency and neutral current (EPM-04C/04CS).
- 20 Low current / frequency warning output for frequency and neutral current (EPM-04C/04CS).
- 21 Monitoring the L1, L2, L3 voltages values when V LED is turned on and displays the frequency in 4th display.
- 22 Monitoring the L1, L2, L3 currents values when A LED is turned on and displays the neutral current in 4th display.
- 23 Indicates the activating delta connection when Δ is turned on. Neutral current protection is deactivated even if is activated.
- 24 H LED for max. instant current and voltage. Max. instant currents and voltages are displayed when this LED is turned on.
- 25 L LED for min. instant current and voltage. Min. instant currents and voltages are displayed when this LED is turned on.
- 26 M LED for max. demand. Max. demand values are displayed when this LED is turned on.
- 27 SET button. It is used to enter into the menu and to save the values. If SET button is pressed for 3 sec. in the measurement mode, you can enter into menus. This button is used for monitoring the max. (H), Min. (L) current values and max. demand values in measurement mode.
- 28 Downward selection button.
- 29 Upward selection button.
- 30 ESC button. Escaping from the menu. And also used for switching off the Latch function while this function has activated.


General information
 EPM-04/04C/04CS is designed for measuring Phase current, frequency, neutral current and voltages (Phase-Phase and Phase-Neutral) in a 3-Phase system.
 EPM-04C/04CS:
 Device has 2 warning output which named as Out1 and Out2. (NO-Normally Open) Please refer to "Output" menu for the functions of the relays.

MULTIMETER EPM-04 / 04C / 04CS

Dimensions

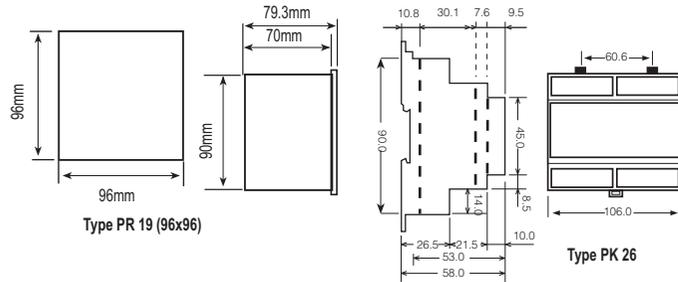

Panel Cut-out

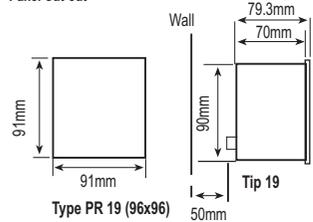


Summary of the Contact Operations *

	ALTERNATIVE 1 (U-I)	ALTERNATIVE 2 (H-L)
Out 1	Current --> Under/Over	Voltage --> Under
Out 2	Voltage --> Under/Over	Voltage --> Over
	Frequency --> Under/Over	Frequency --> Over
	Phase Seq.	Current --> Over

* Valid for EPM-04C/04CS

Connection Diagram

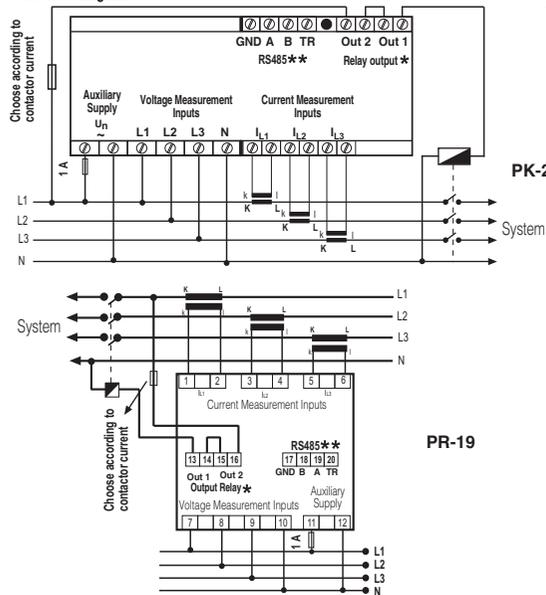

* Available only for EPM-04C/04CS
 ** Available only for EPM-04CS
 Note: For CT-25 models:
 k: When CT-25 is used, Red cable is connected to k terminal.
 l: When CT-25 is used, Black cable is connected to l terminal.



MULTIMETER

EPM-04 / 04C / 04CS

Below measurement and application can be implemented with EPM-04/04C/04CS.

- Phase currents (IL), Neutral current (IN), Phase-Phase and Phase-Neutral voltages can be measured.
- Existence of live phases can be observed by L1-L2-L3 LEDs on the device.
- Min. and max. values for measured currents and voltages can be monitored with only one button.
- Max. demand values for measured current can be monitored, demand time can be defined in "dE t" menu.
- A 4 digit password can be defined from pin menu in order to prevent the change of settings by unauthorized person.
- Current transformer ratio is programmable. (1.... 2000)
Current transformer ratio can be programmed in term of "turn number" between 1....20 (for CT-25 adapted devices).
Voltage transformer ratio is programmable. (0.1 4000)
- A user defined measurement range is used for monitoring the voltages and currents, and Out1 & Out2 outputs are used for warning the user and disconnecting the device in case of exceeding the limits of measurement range.
- In case of using the device for measuring the current values of motors etc., start delay (Auto rSt) function can be used for preventing the equipment against the improper tripping, which is because of the demurrage current.
- When a failure has occurred use the Latch function, in order to keep the device with saving its position (Latched), even if the failure conditions are removed.
- 7th, 8th and 9th subjects are valid for EPM-04C/04CS.

Using the Buttons:

- Some buttons and button groups are used for the below special function when device is in the measurement mode (Without selecting a menu).
- Monitoring for phase currents (A LED is activated) or phase voltages (V LED is activated)
- Used for changing the menu settings and parameters in programming mode.
- Used for monitoring min. / max. currents and voltages or max. demand values. Switching to the programming mode if pressed for 3 sec. In programming mode; it is used for switching to the menu and saving changes for the parameters.
- Switching to the previous menu and escaping the programming menu without saving the changes.
- If the Latch function is turned on (EPM-04C/04CS); output will be released when current(s) of system is exceed the defined values. When the system's current turns back to normal values then output doesn't react. Output can be triggered by the "ESC" button.

Commissioning the EPM-04C/04CS and menu setting:

Energize the device after implementing the connections respected to the user manual.
Enter the proper menu settings in order to correct measurements and applications.

Current Transformer Ratio Setup:

In this menu, current transformer ratio is set between 1 - 2000. (This menu is not available in the devices which are adapted with CT-25.)
Note: If the current transformer is not used between the system and device, current transformer ratio is entered as "1".
Example: If a current transformer which has a ratio of 30/5A is used between the system and device;
Current transformer ratio is entered as = 30/5 = 6.
Press SET button for 3 sec. (trA Fo menu is displayed)

Press SET button: trA Fo Ctr menu is displayed (In CT-25 adapted devices, trA Fo trn is displayed instead.)
(Note: trA Fo Utr or Con nEC to n menu can be displayed by scrolling the UP/DOWN buttons.)

Press SET button. Blinking the first digit of displayed value appears. (trA Fo nEC to n menu can be programmed similarly.)

Enter the blinking digit value by scrolling UP/DOWN buttons. Switch to the other digits by using SET button, use ESC button to go to previous digit. After you entered the last digit press SET button. "trA Fo Ctr" is displayed. (Data is entered but is not activated yet. For activating the new data please follow the below steps).

Press ESC button one by one until "SAU E SET YES" is displayed.

Press SET button. When "SAU E SET YES" is displayed (If you press ESC button or choose "no" option instead of "YES" then new data will be cancelled and previous value will be activated).

Programming the Turn Number:

This menu is available for CT-25 adapted devices. User defines the turn number, which is the number of how many turn the current cable has rounded into the CT-25. Numbers can be selected between 1-20. Greater the number of turn means greater the sensitivity.

trn	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
trn min(A)	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0	1.1	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0
trn max(A)	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	

Voltage Transformer Ratio:

In this menu, voltage transformer ratio is set between 0000,1 - 4000,0.
Note: If the voltage transformer is not used between the system and EPM-04, voltage transformer ratio is entered as "1".
Example: If a voltage transformer which has a ratio of 34.5KV/100V is used between the system and device; Voltage transformer ratio is entered as 345. (34500/100)

Selecting the Connection Type :

Connection can be selected as Star or Delta in this menu.
Phase-Neutral voltage monitoring can be implemented if the "Star" connection is selected.

Phase-Phase voltage monitoring can be implemented if the "Delta" connection is selected.

NOTE: When the "Delta" connection is selected, "neutral current monitoring" can't be implemented even if it is activated.

User Password Setup:

In this menu user password is defined and activated.
You must define and activate a 4 digit user password for preventing device settings from the illegal usage.
There are 2 sub menu in the Pin menu.

Activating the user password :

This menu is used for activating the user password.
After the user password is activated for entering to the menus; if the button is pressed for 3 sec., while the instant values are observed, user password is required. If the user password is entered wrong device does not latch.
Note: Factory default value of user password is "0000"

For activating the user password, in the measurement mode
Press SET button for 3 sec. (trA Fo menu is displayed)

Find the "Pin" menu by scrolling UP/DOWN buttons.

Press SET button (Pin Act IUA IE is displayed.)

Press SET button. Blinking the first digit of displayed value appears.

Enter the blinking digit value by scrolling UP/DOWN buttons. Switch to the other digits by using SET button, use ESC button to go to previous digit. After you entered the last digit press SET button. "Pin Act IUA IE" is displayed. (Data is entered but is not activated yet. For activating the new data please follow the below steps).

Press ESC button one by one until "SAU E SET YES" is displayed.

Press SET button. When "SAU E SET YES" is displayed (If you press ESC button or choose "no" option instead of "YES" then new data will be cancelled and previous value will be activated).

Changing of User Password:

This menu is used for changing the user password.
Note: Factory default value for user password is "0000"

For activating the user password, in the measurement mode
Press SET button 3 sec. (trA Fo menu is displayed.)

Find the "Pin" menu by scrolling UP/DOWN buttons.

Press SET button (Pin Act IUA IE is displayed.)

Find the "Pin CHA n9E" menu by scrolling UP/DOWN buttons.

MULTIMETER

EPM-04 / 04C / 04CS

Press ESC button one by one until "SAU E SET YES" is displayed.

Press SET button. When "SAU E SET YES" is displayed (If you press ESC button or choose "no" option instead of "YES" then new data will be cancelled and previous value will be activated).

Serial Communication (for EPM-04CS)

EPM-04CS have MODBUS RTU communication protocol which is optical isolated. All measured parameters can be transfer to the computer. Transformer ratios and communication parameters can be set. Saved values can be reset.

Programmed parameter for communication explained below.

Press SET button 3 sec. (trA Fo menu is displayed.)

Find RS-485 menu by scrolling UP/DOWN buttons.

Press SET button (Adr ESS menu is displayed.)

Find "Adr ESS / bAU d / PArnty" menu by scrolling UP/DOWN buttons.

Press SET button ("001 / 9600 / no" menu is displayed.)

Enter the parameter values by scrolling UP/DOWN buttons (001...247 / 2400...38400 / no, EUEn, odd).

Press SET button, "Adr ESS / bAU d / PArnty" is displayed. (Data is entered but is not activated yet. For activating the new data please follow the below steps)

Press ESC button one by one until "SAU E SET YES" is displayed.

Press SET button. When "SAU E SET YES" is displayed (If you press ESC button or choose "no" option instead of "YES" then new data will be cancelled and previous value will be activated).

MODBUS RTU PROTOCOL (Available only for EPM-04CS)

Standart MODBUS RTU message is shown below.

T	ADDRESS & BIT	FUNCTION & BIT	DATA NxBIT	CRCH	CRCL	T
---	---------------	----------------	------------	------	------	---

The T times corresponds to a time in which data must not be exchanged on the communication bus to allow the connected devices to recognize the end of one message and the beginning of another. This time must be at least 3.5 characters at the selected baud rate. Address range (1-247) is address of the connected device. The data field contains data sent to the slave by master or data sent to master by slave.
CRC is a error check method by using MODBUS RTU protocol and consists of 2 bytes.

Available Modbus Function:

03H	READ HOLD REGISTERS
04H	PRESET SINGLE REGISTER
10H	PRESET MULTIPLE REGISTERS

Read Hold (03) function is used for reading measured values and set value. If any request of reading of a register, excepted mentioned in register table, device will send an error message.

For example to read phase1 voltage by sending a message to the device.

01 03 00 00 00 02 XX XX
01 Device address
03 Function
00 MSB address
80 LSB address
00 Register number MSB
02 Register number LSB
XX CRC MSB
XX CRC LSB

Preset Single Register (06) function is used for writing the setting values, erasing the energy counter or resetting the min., max., demand values. Current transformers ratio can be set 0-2000, voltage transformer ratio can be set 1-40000.


i.e. Setting CT as 100;
01 06 80 02 00 64 XX XX
01 Device address
06 Function
80 MSB address
02 LSB address
00 Data MSB
64 Data LSB
XX CRC MSB
XX CRC LSB

Preset Multiple Register(10H) is used to set more than one register at same time.


i.e. Setting CT as 100, UI as 20.0;
01 10 80 00 00 02 04 00 C8 00 64 XX XX
01 Device Address
10 Function
80 MSB address
00 LSB address
00 Register number MSB
02 Register number LSB
04 Byte count
00 Data MSB
64 Data LSB
C8 Data LSB
00 Data MSB
64 Data LSB
XX CRC MSB
XX CRC LSB

EPM-04CS COMPUTER CONNECTION

31 DEVICES CAN BE CONNECTED AT THE SAME LINE

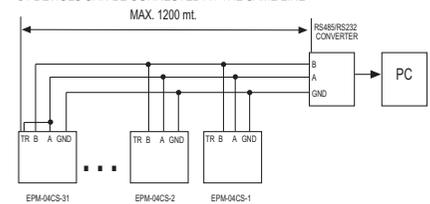

MAX. 247 DEVICES CAN BE CONNECTED AT SAME LINE BY USING REPEATER.

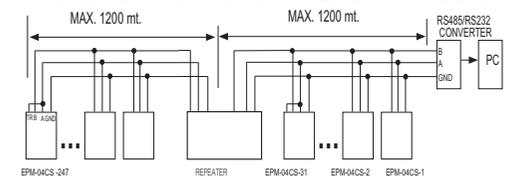

Technical Features

Rated Voltage (Un)	: Please look at back side of the device.
Operating frequency (f)	: 45-65 Hz
Auxiliary Supply Power Consumption	: < 5 VA
Measuring Input Power Consumption	: < 1 VA
Measurement range	
Current	: 0.05-5.5A -
	: 2 - 120 A ~ for CT-25
Voltage	: 10-300 V AC (Phase - Neutral)
	: 10-500 V AC (Phase - Phase)
	: 1 ± 1% digit ((10%~100%) x full scale)
	: 1.... 20
	: 1 - 4000
	: 40.000
	: MODBUS RTU (RS 485)
	: Optic isolated, programmable
	: 2400-4800-9600-19200-38400 bps
	: 1-247
	: No. Odd, Even, 8 Data Bits, 2 Stop Bits
	: 2 No. 250 V AC, 5A, 1250 VA
	: -5°C; +50°C
	: Red LED display
	: PR-19, PK-26
	: Double Insulation - Class II (II)
	: IP 40
	: IP 00
	: Nonflammable
	: Panel Mounted (PR-19)
	: Rail Mounted (PK-26)
	: 2.5 mm²
	: 0.56 kg (PK-26)
	: Class III
	: 91x91 mm (PR-19)
	: 46x107 mm (PK-26)

Class
Current Transformer Ratio
Turn number for CT-25 adapted models
Voltage Transformer Ratio
Max. Ctr x Vr
Communications (for EPM-04CS)

Baud Rate (for EPM-04CS)
Address (for EPM-04CS)
Parity (for EPM-04CS)
Output Relay(s) for EPM-04C/04CS)
Ambient Temperature
Display
Dimensions
Equipment Protection Class
Box Protection Class
Terminal Protection Class
Box Material
Mounting
Wire Cross section (for terminals)
Weight
Mounting Category
Panel Size

Default Settings


././5A type				
Ctr	- 0001	I-H L-1 - 5.000	I-L L-2 - 0.000	Out relay - U-1
Utr	- 0011	I-H L-2 - 5.000	I-L L-3 - 0.000	Latch - OFF
trn	- 001	I-H L-3 - 5.000	I-L L-n - 0.000	Out Inverse - OFF
ConnEC	- StAr	I-H L-n - 5.000	I-L Hys - 0.200	
		I-H Hys - 0.100	I-L ofd - 0.100	bAUd - 9600
		I-H ofd - 01.0	I-L ofd - 01.0	AdrESS - 001
Pin Act - of		I-H ofdA - 01.0	Str ArT dEL - 0.000	PArTy - no
Pin	- 0000	I-H ofd - 01.0	Auto reset - OFF	
		I-L L-1 - 0.000	Cur ins trip - OFF	

dt				
	- 15			
U-H L-1 - 250		U-L L-3 - 180		Frq Hi - 63
U-H L-2 - 250		U-L Hys - 010.0		F-H Hys - 01.00
U-H L-3 - 250		U-L ond - 003.0		Frq Lo - 47
U-H ofd - 01.0		U-L ofd - 01.0		F-L Hys - 01.00
U-H ond - 003.0		Vol. PHS Seq - OFF		Frq ond - 003.0
U-H ofd - 003.0		Vol. inS triP - OFF		Frq ofd - 003.0
U-L L-1 - 180				
U-L L-2 - 180				

CT-25 type				
I-H L-1 - 100.0		I-L L-2 - 0.000		
I-H L-2 - 100.0		I-L L-3 - 0.000		
I-H L-3 - 100.0		I-L L-n - 0.000		
I-H L-n - 100.0		I-L Hys - 2.000		
I-H Hys - 2.000		I-L ond - 010.0		
I-H ofd - 01.0		I-L ofd - 01.0		
I-H ofdA - 01.0		Str ArT dEL - 0.000		
I-L L-1 - 0.000		Auto reset - OFF		
		Cur ins trip - OFF		

MULTIMETER EPM-04 / 04C / 04CS


Programming the "SP C_{Ur} Hi", "SP C_{Ur} Lo", "SP UoL Hi" and "SP UoL Lo".

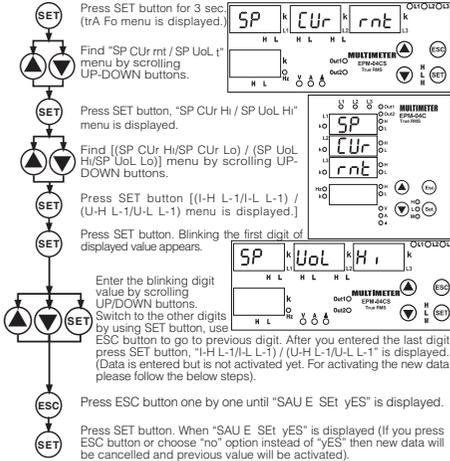

Start-up delay: Start Delay Time is used to prevent from faulty switchings caused by motor start-up current (demurrage current). When Out1 remain switched ON in this time period (When U-L1 is selected). In this time period, even if the current value exceeds the limits device doesn't sense it as a warning. The device doesn't give a warning even if the current value isn't in the setting interval. This function is used with "Auto Reset" function.


Auto Reset Function: If **Auto Reset** function is selected as ON; Each time that the current decreases "50mAxCtr" value, start-up delay time is reset and when the current value increases "50mAxCtr", start-up delay function is activated. If **Auto Reset** function is selected as OFF; if the power supply is switched off and then switched on, start-up delay function is activated.

Please refer to below graphics for the operating principle of **StA r dEL** and **Aut o rSt** functions

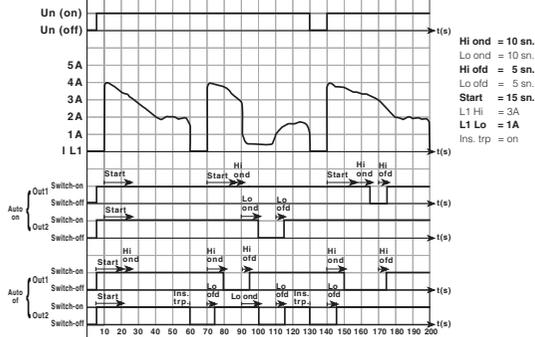

Instant Tripping Function. At position **ON**, if any phase current (IL1, IL2, IL3 and IN) exceeds 1.5 times of high (I-H L-1, I-H L-2, I-H L-3, I-H L-n) values, the "current output" switches **off** instantly, output LED turned **off** and H LEDs for related currents turned **on**. (Please refer to "Output".) At position **OFF**, if any phase current (IL1, IL2, IL3 and IN) decrease 0.5 times of low (I-L L-1, I-L L-2, I-L L-3, I-L L-n) values, the "current output" switches **off** instantly, output LED turned **off** and L LEDs for related currents turned **on**. (Please refer to "Output".) At position **OFF**, instant tripping function is cancelled.

Programming "C_{Ur} inS trP", "Aut o rSt" and "UoL inS trP"

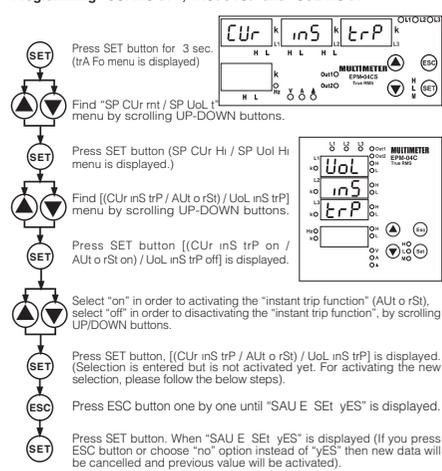

Programming "SP UoL t": Using purposes of submenus of "SP UoL t" explained below with details.

In this menu, high set points for voltage values are programmed. Hi values for Phase-Neutral / Phase-Phase (according to Star / Delta selection) can be entered one by one.

If all the voltage values (Phase-Neutral / Phase-Phase) are under the Hi value; related relay is switched on, its LED turned **on** (please refer "Output") and related H LEDs are turned **off**. If all the voltage values (Phase-Neutral / Phase-Phase) are over the Hi value; H LED blinks and related output is switched off at the end of "delay on time" (U-H ond), its LED turned **off** (please refer "Output") and related H LEDs are turned **on**.

If all voltage (Phase-Neutral / Phase-Phase) are below the high set value (Hi) as a hysteresis voltage (U-H HyS), related output is switched on at the end of "delay off time" (U-H oFd), its LED turned **on** (please refer "Output") and H LED is turned **off**.

Note: High Voltage values are programmed for (Phase-Neutral / Phase-Phase) separately but "Hi HyS" (hysteresis) and "Hi ond" (delay on time) and "Hi oFd" (delay off time) values are common; these parameters have same values for Phase-Neutral / Phase-Phase. When Connection type (Star/Delta) is selected (refer to Connection menu), device will change the U-H L-1, U-H L-2 and U-H L-3 values automatically according to connection.

Example: If the connection type is selected as Star (with neutral); U-H HyS=10V U-H L-1=250V, U-H L-2=255V, U-H L-3=260V and then this connection type is selected as Delta (without neutral), device will change the values after calculated them according to Phase-Phase values.

New values; U-H L-1 (L1-L2 Phase to phase voltage) = 433 V U-H L-2 (L2-L3 Phase to phase voltage) = 441 V U-H L-3 (L3-L1 Phase to phase voltage) = 450 V U-H-HyS = 10 V.

There are 6 submenus. U-H L-1, U-H L-2, U-H L-3, U-H HyS, U-H ond, U-H oFd.

MULTIMETER EPM-04 / 04C / 04CS

In this menu, low set points for voltage values are programmed. Lo values for Phase-Neutral / Phase-Phase (according to Star / Delta selection) can be entered one by one. If all the voltage values (Phase-Neutral / Phase-Phase) are over the Lo value; related output is switched on, its LED turned **on** (please refer "Output") and related L LEDs are turned **off**.

If any of the voltage values (Phase-Neutral / Phase-Phase) decrease the Lo value, L LED blinks and related output is switched **off** at the end of "delay on time" (U-L ond), its LED turned **off** (please refer "Output") and related L LED is turned **on** continuously. If all voltage (Phase-Neutral / Phase-Phase) values increase the low set value (Lo) as a hysteresis voltage (U-L HyS), related relay is switched **on** at the end of the "delay off time" (U-L oFd), its LED turned **on** (please refer "Output") and L LED is turned **off**.

Note: Low Voltage values are programmed for (Phase-Neutral / Phase-Phase) separately but "U-L HyS" (hysteresis), "U-L ond" (delay on time) and "U-L oFd" (delay off time) values are common; these parameters have same values for Phase-Neutral / Phase-Phase. When Connection type (Star/Delta) is selected (refer to Connection menu), device will change the U-L L-1, U-L L-2 and U-L L-3 values automatically according to connection.

Example: If the connection type is selected as Star (with neutral); U-L HyS=10V U-L L-1=180V, U-L L-2=175V, U-L L-3=170V and then this connection type is selected as Delta (without neutral), device will change the values after calculated them according to Phase-Phase values.

New values; U-L L-1 (L1-L2 Phase to phase voltage) = 311 V U-L L-2 (L2-L3 Phase to phase voltage) = 303 V U-L L-3 (L3-L1 Phase to phase voltage) = 294 V U-L-HyS = 10 V.

There are 6 submenus. U-L L-1, U-L L-2, U-L L-3, U-L HyS, U-L ond, U-L oFd.

High value for L1, when the Star is selected; high value for L1-L2, when the Delta selected can be defined in this menu.

0...300 for Star connection and 0...500 for Delta connection can be defined. If the value is set to zero (0), the high voltage warning is disabled. Refer "SP UoL Hi" for details.

Note: L2 and L3 phases can be programmed similarly.

Low value for L1, when the Star is selected; low value for L1-L2, when the Delta selected can be defined in this menu.

0...300 for Star connection and 0...500 for Delta connection can be defined. If the value is set to zero (0), the high voltage warning is disabled. Refer "SP UoL Lo" for details.


Note: L2 and L3 phases can be programmed similarly.

(Refer to Page-4 for SP C_{Ur} Hi, SP C_{Ur} Lo, SP UoL Hi ve SP UoL Lo)

In this menu, required hysteresis voltage for high voltage warning is programmed (same for Phase-Neutral/Phase-Phase) 0...200V for Star connection and 0...200V for Delta connection can be defined. Refer "SP UoL Hi" for details.

In this menu, required hysteresis voltage for low voltage warning is programmed (same for Phase-Neutral/Phase-Phase) 0...200V for Star connection and 0...200V for Delta connection can be defined. Refer "SP UoL Lo" for details.

Programming the "U-H HyS", "U-L HyS", "I-H HyS", "I-L HyS"

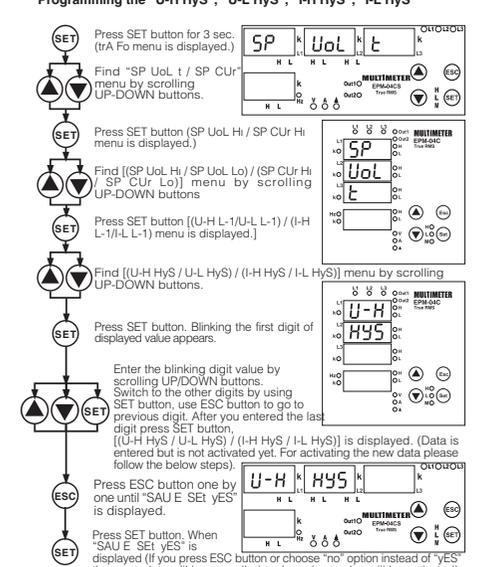

"Delay on" time for activating the output for high voltage warning. It is common for all voltages (same for Phase-Neutral/Phase-Phase.)

The value can be programmed between 000.0 and 999.9 in terms of seconds. (Refer "SP UoL Hi" for details.)

"Delay on" time for activating the output for low voltage warning. It is common for all voltages (same for Phase-Neutral/Phase-Phase.)

The value can be programmed between 000.0 and 999.9 in terms of seconds. (Refer "SP UoL Lo" for details.)

"Delay off" time for activating the output for high voltage warning. It is common for all voltages (same for Phase-Neutral/Phase-Phase.)

The value can be programmed between 000.0 and 999.9 in terms of seconds. (Refer "SP UoL Hi" for details.)

"Delay off" time for activating the output for low voltage warning. It is common for all voltages (same for Phase-Neutral/Phase-Phase.)

The value can be programmed between 000.0 and 999.9 in terms of seconds. (Refer "SP UoL Lo" for details.)

Programming the "U-H ond", "U-H oFd", "U-L ond", "U-L oFd", "I-H ond", "I-H oFd", "I-L ond", "I-L oFd".

