

X20CP148x and X20CP348x

1 General information

Based on state-of-the-art Intel Celeron processor technology, the X20 CPUs cover a wide spectrum of demands. They can be implemented in solutions ranging from standard applications to those requiring the highest levels of performance.

The x86 100MHz-compatible X20CP1483 is the entry-level X20 CPU. With an optimum price/performance ratio, it has the same basic features as all of the larger CPUs.

USB and Ethernet are included in every CPU. In addition, every CPU has a POWERLINK connection for real-time communication.

In addition, there are up to three multi-purpose slots for additional interface modules.

- Intel Celeron 650/400/266 Performance with additional I/O processor
- Entry-level CPU is Intel x86 100MHz-compatible with additional I/O processor
- Ethernet, POWERLINK V1/V2 and USB onboard
- Modular expansion of interfaces
- CompactFlash as removable application memory
- Fan-free or exchangeable fan
- Extremely compact

2 Oder data - X20CP148x



Model number	Short description
CPUs	
X20CP1483	X20 CPU, x86 100 MHz Intel compatible, 32 MB DRAM, 128 kB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP1483-1	X20 CPU, x86 100 MHz Intel compatible, 64 MB DRAM, 128 kB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP1484	X20 CPU, Celeron 266 compatible, 32 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP1484-1	X20 CPU, Celeron 266 compatible, 64 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP1485	X20 CPU, Celeron 400, 32 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP1485-1	X20 CPU, Celeron 400, 64 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP1486	X20 CPU, Celeron 650, 64 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
Required accessories	
CompactFlash	
0CFCRD.0128E.01	Compact Flash 128MB WD extended Temp.
0CFCRD.0512E.01	Compact Flash 512MB WD extended Temp.
5CFCRD.0064-03	CompactFlash 64 MB Western Digital (SLC)
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)
Optional accessories	
Batteries	
0AC201.91	Lithium batteries 4 pieces, 3 V / 950 mAh button cell Hereby we declare that the Lithium cells contained in this shipment qualify as „partly regulated“. Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell
X20 CPU exchangeable fan	
X20AC0EF1	X20 CPU exchangeable fan

Table 1: X20CP1483, X20CP1483-1, X20CP1484, X20CP1484-1, X20CP1485, X20CP1485-1, X20CP1486 - Order data

Included in delivery

Model number	Short description
4A0006.00-000	Backup battery (see also section 21 "Changing the Lithium battery" on page 21)
-	Interface module slot covers
X20AC0SR1	X20 locking plate (right)
X20TB12	X20 terminal block, 12-pin, 24 V coded

Table 2: X20 CPUs - Contents of delivery

3 Technical data - X20CP148x

Product ID	X20CP1483	X20CP1483-1	X20CP1484	X20CP1484-1	X20CP1485	X20CP1485-1	X20CP1486
Short description							
Interfaces	1x RS232, 1x Ethernet, 1x POWERLINK V1/V2, 2x USB, 1x X2X Link						
System module	CPU						
General information							
Cooling	Fan-free						Fanless with derating (see operational conditions) Exchangeable fans for entire temperature range Fan is monitored
B&R ID code	0xA239	0xAEC5	0x23A5	0xAABE	0x1F18	0xA2AB	0x2164
Status indicators	CPU function, overtemperature, Ethernet, POWERLINK, CompactFlash, battery						
Diagnosics	Yes, using status LED and software status						
Battery	Yes, with status LED						
CPU function	Yes, with status LED						
CompactFlash	Yes, with status LED						
Ethernet	Yes, with status LED						
POWERLINK	Yes, with status LED						
Overtemperature	Yes, with status LED						
Fan diagnostics	-						Yes, with software status
ACOPOS capability	Yes						
Visual Components capability	Yes						
Power consumption - Without memory card, interface module and USB	6.0 W		10.5 W				13.5 W
Internal power consumption of the X2X Link and I/O supply ¹⁾							
Bus	1.42 W						
I/O internal	0.6 W						
Additional power dissipation caused by the actuators (resistive) [W]	-						
Electrical isolation							
IF1 - IF2	Yes						
IF1 - IF3	Yes						
IF1 - IF4	No						
IF1 - IF5	No						
IF1 - IF6	Yes						
IF2 - IF4	Yes						
IF2 - IF5	Yes						
IF3 - IF4	Yes						
IF3 - IF5	Yes						
IF4 - IF5	No						
IF4 - IF6	Yes						
IF5 - IF6	Yes						
PLC - IF1	No						
PLC - IF2	Yes						
PLC - IF3	Yes						
PLC - IF4	No						
PLC - IF5	No						
PLC - IF6	Yes						
Certification							
CE	Yes						
c-UL-us	Yes						
GOST-R	Yes						
CPU and X2X Link supply							
Input voltage	24 VDC -15% / +20%						
Input Current	Max. 2.2 A						
Saving	Integrated, cannot be exchanged						
Reverse polarity protection	Yes						
X2X Link supply output							
Rated output power	7.0 W						
Parallel operation	Yes ²⁾						
Redundant operation	Yes						
Input I/O supply							
Input voltage	24 VDC -15% / +20%						
Saving	Required line fuse max. 10 A (slow blow)						
Output I/O supply							
Rated output voltage	24 VDC						
Permitted contact load	10.0 A						

Table 3: X20CP1483, X20CP1483-1, X20CP1484, X20CP1484-1, X20CP1485, X20CP1485-1, X20CP1486 - Technical data

Product ID	X20CP1483	X20CP1483-1	X20CP1484	X20CP1484-1	X20CP1485	X20CP1485-1	X20CP1486
General supply							
Status indicators	Overload, operating status, module status, RS232 data transfer						
Diagnostics	Yes, with status LED						
RS232 data transfer	Yes, using status LED and software status						
Module run/error	Yes, using status LED and software status						
Overload	Yes, using status LED and software status						
Electrical isolation	No						
I/O feed - I/O supply	Yes						
CPU/X2X Link feed - CPU/X2X Link supply							
Controller							
CompactFlash slot	1						
Real-time clock	Nonvolatile memory, resolution 1 second						
FPU	Yes						
Processor							
Type	x86 100 comp.		Celeron 266 comp.		Celeron 400		Celeron 650
L2 cache					256 kB		
L1 cache for data and program code	16 kB				2x 16 Kb		
Integrated I/O processor	Processes I/O data points in the background						
Modular interface slots	1						
Remanent variables	Max. 32 kB ³⁾		Max. 64 kB ³⁾		Max. 256 kB ³⁾		
Shortest task class cycle time	1 ms		800 µs		400 µs		200 µs
Typical instruction cycle time	0.09 µs		0.007 µs		0.0055 µs		0.0034 µs
Data Buffering	Yes						
Battery monitoring	At least 3 years						
Lithium battery							
Standard memory							
RAM	32 MB SDRAM 64 MB SDRAM		32 MB SDRAM 64 MB SDRAM		32 MB SDRAM		64 MB SDRAM
User RAM	128 kB SRAM ⁴⁾				1 MB SRAM ⁴⁾		
Interfaces							
Interface IF1							
Type	RS232						
Design	Contact via 12-pin terminal block TB12						
Transfer rate	Max. 115.2 kbit/s						
Interface IF2							
Type	Ethernet						
Design	Shielded RJ45 port						
Cable length	Max. 100 m between two stations (segment length)						
Transfer rate	10/100 Mbit/s						
Interface IF3							
Fieldbus	POWERLINK V1/V2						
Type	100 Base-T (ANSI/IEEE 802.3)						
Design	Shielded RJ45 port						
Cable length	Max. 100 m between two stations (segment length)						
Transfer rate	100 Mbit/s						
Interface IF4							
Type	USB 1.1						
Quantity	1						
Design	Type A						
Interface IF5							
Type	USB 1.1						
Quantity	1						
Design	Type A						
IF6 interface							
Type	X2X Link master						
Quantity	1						
Operating conditions							
Mounting orientation							
Horizontal	Yes						
Vertical	Yes						
Installation at altitudes above sea level	No derating						
0 to 2000 m	Reduction of ambient temperature by 0,5°C per 100 m						
> 2000 m							
EN 60529 protection	IP20						
Environmental conditions							
Temperature							
Operation							
Horizontal installation	-25 to 60°C				0 to 55°C		0 to 55°C, fanless: 0 to 45°C
Vertical installation	-25 to 50°C				0 to 50°C		0 to 55°C, fanless operation not permitted
Storage	-40 to 85°C				-25 to 70°C		
Transport	-40 to 85°C				-25 to 70°C		

Table 3: X20CP1483, X20CP1483-1, X20CP1484, X20CP1484-1, X20CP1485, X20CP1485-1, X20CP1486 - Technical data

X20CP148x and X20CP348x

Product ID	X20CP1483	X20CP1483-1	X20CP1484	X20CP1484-1	X20CP1485	X20CP1485-1	X20CP1486
Relative humidity							
Operation	5 to 95%, non-condensing		5 to 95%, non-condensing		5 to 95%		5 to 95%, non-condensing
Storage	5 to 95%, non-condensing		5 to 95%, non-condensing		5 to 95%		5 to 95%, non-condensing
Transport	5 to 95%, non-condensing		5 to 95%, non-condensing		5 to 95%		5 to 95%, non-condensing
Mechanical characteristics							
Note	Order application memory (CompactFlash) separately Backup battery included in delivery X20 locking plate (right) included in delivery X20 terminal block (12-pin) included in delivery Interface module slot covers included in the delivery						
Dimensions							
Width	150 mm						
Height	99 mm						
Depth	85 mm						

Table 3: X20CP1483, X20CP1483-1, X20CP1484, X20CP1484-1, X20CP1485, X20CP1485-1, X20CP1486 - Technical data

- 1) The specified values are maximum values. The exact calculation is available for download as a data sheet with the other module documentation on the B&R homepage.
- 2) In parallel operation, only 75% of the rated power can be assumed. Please ensure that all parallel operating power supplies are switched on and off simultaneously.
- 3) Can be configured in Automation Studio
- 4) Minus the configured remanent variables

4 Order data - X20CP348x



Model number	Short description
CPUs	
X20CP3484	X20 CPU, Celeron 266 compatible, 32 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP3484-1	X20 CPU, Celeron 266 compatible, 64 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP3485	X20 CPU, Celeron 400, 32 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP3485-1	X20 CPU, Celeron 400, 64 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
X20CP3486	X20 CPU, Celeron 650, 64 MB DRAM, 1 MB SRAM, exchangeable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100 Base-T, 1 POWERLINK V1/V2 interface, incl. power supply module, TB12 terminal block and slot covers, X20AC0SR1 X20 end plate right included, order program memory separately.
Required accessories	
CompactFlash	
0CFCRD.0128E.01	Compact Flash 128MB WD extended Temp.
0CFCRD.0512E.01	Compact Flash 512MB WD extended Temp.
5CFCRD.0064-03	CompactFlash 64 MB Western Digital (SLC)
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)
Optional accessories	
Batteries	
0AC201.91	Lithium batteries 4 pieces, 3 V / 950 mAh button cell Hereby we declare that the Lithium cells contained in this shipment qualify as „partly regulated“. Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell
X20 CPU exchangeable fan	
X20AC0EF1	X20 CPU exchangeable fan

Table 4: X20CP3484, X20CP3484-1, X20CP3485, X20CP3485-1, X20CP3486 - Order data

Included in delivery

Model number	Short description
4A0006.00-000	Backup battery (see also section 21 "Changing the Lithium battery" on page 21)
-	Interface module slot covers
X20AC0SR1	X20 locking plate (right)
X20TB12	X20 terminal block, 12-pin, 24 V coded

Table 5: X20 CPUs - Contents of delivery

5 Technical data - X20CP348x

Product ID	X20CP3484	X20CP3484-1	X20CP3485	X20CP3485-1	X20CP3486
Short description					
Interfaces	1x RS232, 1x Ethernet, 1x POWERLINK V1/V2, 2x USB, 1x X2X Link				
System module	CPU				
General information					
Cooling	Fan-free				Fanless with derating (see operational conditions) Exchangeable fans for entire temperature range Fan is monitored
B&R ID code	0x23A6	0xAABF	0x2165	0xA2AC	0x1F19
Status indicators	CPU function, overtemperature, Ethernet, POWERLINK, CompactFlash, battery				
Diagnostics	Yes, using status LED and software status				
Battery	Yes, with status LED				
CPU function	Yes, with status LED				
CompactFlash	Yes, with status LED				
Ethernet	Yes, with status LED				
POWERLINK	Yes, with status LED				
Overtemperature	Yes, with status LED				
Fan	-				Yes, with software status
Fan diagnostics	-				
ACOPOS capability	Yes				
Visual Components capability	Yes				
Power consumption - Without memory card, interface module and USB	10.5 W				13.5 W
Internal power consumption of the X2X Link and I/O supply ¹⁾					
Bus	1.42 W				
I/O internal	0.6 W				
Additional power dissipation caused by the actuators (resistive) [W]	-				
Electrical isolation					
IF1 - IF2	Yes				
IF1 - IF3	Yes				
IF1 - IF4	No				
IF1 - IF5	No				
IF1 - IF6	Yes				
IF2 - IF4	Yes				
IF2 - IF5	Yes				
IF3 - IF4	Yes				
IF3 - IF5	Yes				
IF4 - IF5	No				
IF4 - IF6	Yes				
IF5 - IF6	Yes				
PLC - IF1	No				
PLC - IF2	Yes				
PLC - IF3	Yes				
PLC - IF4	No				
PLC - IF5	No				
PLC - IF6	Yes				
Certification					
CE	Yes				
c-UL-us	Yes				
GOST-R	Yes				
CPU and X2X Link supply					
Input voltage	24 VDC -15% / +20%				
Input Current	Max. 2.2 A				
Saving	Integrated, cannot be exchanged				
Reverse polarity protection	Yes				
X2X Link supply output					
Rated output power	7.0 W				
Parallel operation	Yes ²⁾				
Redundant operation	Yes				
Input I/O supply					
Input voltage	24 VDC -15% / +20%				
Saving	Required line fuse max. 10 A (slow blow)				
Output I/O supply					
Rated output voltage	24 VDC				
Permitted contact load	10.0 A				
General supply					
Status indicators	Overload, operating status, module status, RS232 data transfer				

Table 6: X20CP3484, X20CP3484-1, X20CP3485, X20CP3485-1, X20CP3486 - Technical data

Product ID	X20CP3484	X20CP3484-1	X20CP3485	X20CP3485-1	X20CP3486
Diagnostics	Yes, with status LED				
RS232 data transfer	Yes, using status LED and software status				
Module run/error	Yes, using status LED and software status				
Overload	Yes, using status LED and software status				
Electrical isolation	No				
I/O feed - I/O supply	Yes				
CPU/X2X Link feed - CPU/X2X Link supply					
Controller					
CompactFlash slot	1				
Real-time clock	Nonvolatile memory, resolution 1 second				
FPU	Yes				
Processor	Celeron 266 comp. Celeron 400 Celeron 650				
Type	-				
L2 cache	2x 16 Kb				
L1 cache for data and program code	256 kB				
Integrated I/O processor	Processes I/O data points in the background				
Modular interface slots	3				
Remanent variables	Max. 64 kB ³⁾		Max. 256 kB ³⁾		
Shortest task class cycle time	800 µs		400 µs		200 µs
Typical instruction cycle time	0.007 µs		0.0055 µs		0.0034 µs
Data Buffering	Yes				
Battery monitoring	At least 3 years				
Lithium battery					
Standard memory	32 MB SDRAM 64 MB SDRAM 32 MB SDRAM 64 MB SDRAM				
RAM	1 MB SRAM ⁴⁾				
User RAM					
Interfaces					
Interface IF1	RS232				
Type	Contact via 12-pin terminal block TB12				
Design	Max. 115.2 kbit/s				
Transfer rate					
Interface IF2	Ethernet				
Type	Shielded RJ45 port				
Design	Max. 100 m between two stations (segment length)				
Cable length	10/100 Mbit/s				
Transfer rate					
Interface IF3	POWERLINK V1/V2				
Fieldbus	100 Base-T (ANSI/IEEE 802.3)				
Type	Shielded RJ45 port				
Design	Max. 100 m between two stations (segment length)				
Cable length	100 Mbit/s				
Transfer rate					
Interface IF4	USB 1.1				
Type	1				
Quantity	Type A				
Design					
Interface IF5	USB 1.1				
Type	1				
Quantity	Type A				
Design					
IF6 interface	X2X Link master				
Type	1				
Quantity					
Operating conditions					
Mounting orientation	Yes				
Horizontal	Yes				
Vertical					
Installation at altitudes above sea level	No derating				
0 to 2000 m	Reduction of ambient temperature by 0,5°C per 100 m				
> 2000 m					
EN 60529 protection	IP20				
Environmental conditions					
Temperature	0 to 55°C				
Operation	0 to 50°C				
Horizontal installation	0 to 55°C, fanless: 0 to 45°C				
Vertical installation	0 to 55°C, fanless operation not permitted				
Storage	-25 to 70°C				
Transport	-25 to 70°C				
Relative humidity	5 to 95%, non-condensing				
Operation					

Table 6: X20CP3484, X20CP3484-1, X20CP3485, X20CP3485-1, X20CP3486 - Technical data

Product ID	X20CP3484	X20CP3484-1	X20CP3485	X20CP3485-1	X20CP3486
Storage	5 to 95%, non-condensing			5 to 95%, non-condensing	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing				
Mechanical characteristics					
Note	Order application memory (CompactFlash) separately Backup battery included in delivery X20 locking plate (right) included in delivery X20 terminal block (12-pin) included in delivery Interface module slot covers included in the delivery				
Dimensions					
Width	200 mm				
Height	99 mm				
Depth	85 mm				

Table 6: X20CP3484, X20CP3484-1, X20CP3485, X20CP3485-1, X20CP3486 - Technical data

- 1) The specified values are maximum values. The exact calculation is available for download as a data sheet with the other module documentation on the B&R homepage.
- 2) In parallel operation, only 75% of the rated power can be assumed. Please ensure that all parallel operating power supplies are switched on and off simultaneously.
- 3) Can be configured in Automation Studio
- 4) Minus the configured remanent variables

6 X20 CPUs - Status LEDs

Image	LED	Color	Status	Description
	R/E	Green	On	Application running
		Red	On	SERVICE mode
	RDY/F	Yellow	On	SERVICE or BOOT mode
		Red	On	Overtemperature
	S/E	Green/red		Status/Error LED. The LED states are described in section 6.1 "S/E LED" on page 11.
	EPL	Green	On	A link to the POWERLINK remote station has been established.
			Blinking	A link to the POWERLINK remote station has been established. The LED blinks when Ethernet activity is present on the bus.
	ETH	Green	On	A link to the Ethernet remote station has been established.
			Blinking	A link to the Ethernet remote station has been established. The LED blinks when Ethernet activity is present on the bus.
	CF	Green	On	CompactFlash inserted and detected
		Yellow	On	CompactFlash read/write access
	DC OK	Yellow	On	CPU power supply OK
	Red	On	Backup battery is empty	

Table 7: X20 CPUs - CPU status indicator

6.1 S/E LED

The status/error LED is a green/red dual LED. The status LEDs can have different meanings depending on operating mode.

6.1.1 Ethernet mode

In this mode, the interface is operated as an Ethernet interface.

Green - status	Description
On	Interface operated as Ethernet interface

Table 8: Status/error LED - Ethernet operating mode

6.1.2 POWERLINK V1

Status LED		Status of the POWERLINK station
Green	Red	
On	Off	The POWERLINK station is running with no errors.
Off	On	A system error has occurred. The error type can be read using the PLC logbook. An irreparable problem has occurred. The system cannot properly carry out its tasks. This status can only be changed by resetting the module.
Blinking alternately		The POWERLINK managing node failed. This error code can only occur in controlled node operation. This means that the set station number lies within the range 0x01 - 0xFD.
Off	Blinking	System failure. The red blinking LED signals an error code (see section 6.2 "System failure error codes" on page 13).
Off	Off	Module is: <ul style="list-style-type: none"> Switched off Starting up Not correctly configured in Automation Studio Defective

Table 9: Status/error LED - POWERLINK V1 operating mode

6.1.3 POWERLINK V2

Red - error	Description
On	<p>The module has encountered an error (failed Ethernet frames, increased number of collisions on the network, etc.). If an error occurs in the following states, then the green LED blinks over the red LED:</p> <ul style="list-style-type: none"> • PRE_OPERATIONAL_1 • PRE_OPERATIONAL_2 • READY_TO_OPERATE <p>Note: The LED blinks red several times immediately after startup. This is not an error.</p>

Table 10: Status / Error LED as error LED - POWERLINK V2 operating mode

Green - status	Description
Off NOT_ACTIVE	<p>Status Module is in the NOT_ACTIVE state or is:</p> <ul style="list-style-type: none"> • Switched off • Starting up • Not correctly configured in Automation Studio • Defective <p>Managing Node (MN) The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the module goes directly into PRE_OPERATIONAL_1 state (single flash). However, if POWERLINK communication is detected before the time expires, then the MN will not be started.</p> <p>Controlled Node (CN) The bus is monitored for POWERLINK frames. If a corresponding frame is not received within the defined time frame (timeout), then the module will directly enter the state BASIC_ETHERNET (flickering). If, however, POWERLINK communication is detected during this time, the module goes directly into the PRE_OPERATIONAL_1 status (single flash).</p>
Green flickering (approx. 10 Hz) BASIC_ETHERNET	<p>Status The status of the module is BASIC_ETHERNET. The interface is operated as an Ethernet TCP/IP interface.</p> <p>Managing Node (MN) This status can only be changed by resetting the module.</p> <p>Controlled Node (CN) If POWERLINK communication is detected while in this status, the status of the module changes to PRE_OPERATIONAL_1 (single flash).</p>
Single flash (approx. 1 Hz) PRE_OPERATIONAL_1	<p>Status The status of the module is PRE_OPERATIONAL_1.</p> <p>Managing Node (MN) The MN starts the operation of the "reduced cycle". There is not yet any cyclic communication.</p> <p>Controlled Node (CN) In this status, the module can be configured by the MN. The CN waits until it receives an SoC frame and then switches to PRE_OPERATIONAL_2 status (double flash). A lit red LED in this state indicates MN failure.</p>
Double flash (approx. 1 Hz) PRE_OPERATIONAL_2	<p>Status The status of the module is PRE_OPERATIONAL_2.</p> <p>Managing Node (MN) The MN begins with the cyclic communication (cyclic input data is not yet evaluated). The CNs are configured in this status.</p> <p>Controlled Node (CN) In this status, the module can be configured by the MN. After this, a command changes the status to READY_TO_OPERATE (triple flash). A lit red LED in this state indicates MN failure.</p>

Table 11: Status / Error LED as status LED - POWERLINK V2 operating mode

Green - status	Description
Triple flash (approx. 1 Hz) READY_TO_OPERATE	<p>Status The status of the module is READY_TO_OPERATE.</p> <p>Managing Node (MN) Cyclic and asynchronous communication. Received PDO data is ignored.</p> <p>Controlled Node (CN) The module configuration is complete. Normal cyclic and asynchronous communication. The PDO data sent corresponds to the PDO mapping used. However, cyclic data is not yet evaluated. A lit red LED in this state indicates MN failure.</p>
On OPERATIONAL	<p>Status The status of the module is OPERATIONAL. PDO Mapping is active and cyclic data is evaluated.</p>
Blinking (approx. 2.5 Hz) STOPPED	<p>Status The status of the module is STOPPED.</p> <p>Managing Node (MN) This status is not possible for the MN.</p> <p>Controlled Node (CN) No output data is produced and no input data is received. Only the appropriate command from the MN can enter or leave this state.</p>

Table 11: Status / Error LED as status LED - POWERLINK V2 operating mode

6.2 System failure error codes

Incorrect configuration or defective hardware can cause a system failure error.

The error is displayed via the red error LED using four switch-on phases. The switch-on phases are either 150 ms or 600 ms long. Error code outputs are repeated cyclically after 2 seconds.

Error description	Error code displayed by red status LED									
RAM errors: The module is defective and must be replaced.	•	•	•	-	Break	•	•	•	-	Break
Hardware errors: The module or a system component is defective and must be replaced.	-	•	•	-	Break	-	•	•	-	Break

Table 12: Status/error LED as error LED - system failure error codes

Legend:

- ... 150 ms
- ... 600 ms
- Break ... 2 sec. delay

7 Status LEDs for integrated power supply

Image	LED	Color	Status	Description
	r	Green	Off	Module supply not connected
			Single flash	Reset mode
			Blinking	PREOPERATIONAL mode
			On	RUN mode
	e	Red	Off	Module supply not connected or everything is OK
			Double flash	LED indicates one of the following states: <ul style="list-style-type: none"> X2X Link power supply is overloaded I/O supply too low Input voltage for X2X Link supply too low
	e + r	Steady red / single green flash	Invalid firmware	
	S	Yellow	Off	No RS232 activity
			On	The LED is on, when data is being sent or received via the RS232 interface
	l	Red	Off	X2X Link supply in the acceptable range
On			X2X Link power supply is overloaded	

Table 13: X20 CPUs - Status indicators for integrated power supply

8 Control and connection elements

X20CP148x

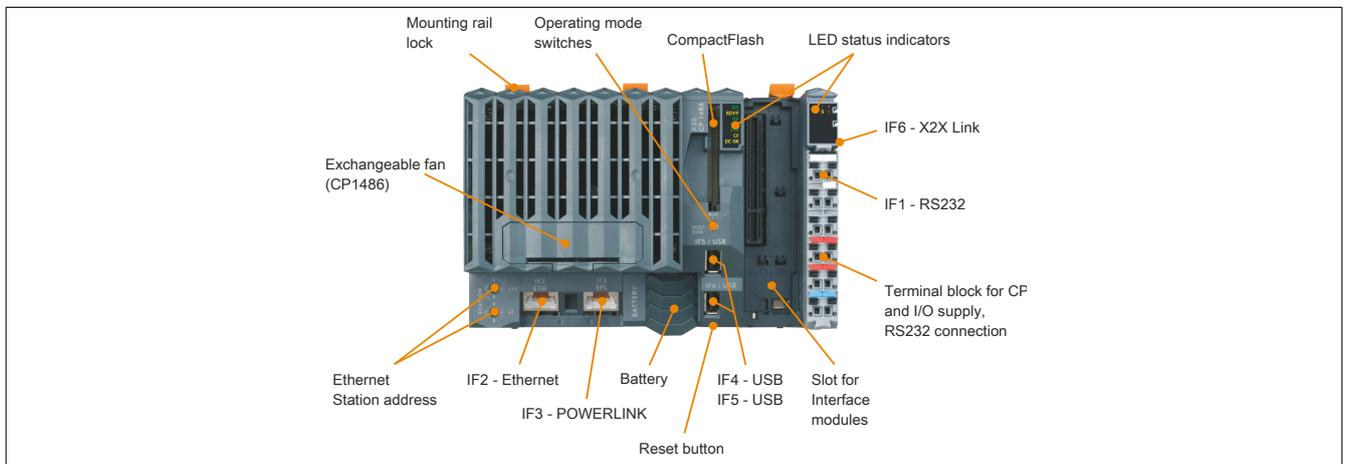


Figure 1: X20 CPUs - Operating elements for X20CP1483, X20CP1483-1, X20CP1484, X20CP1484-1, X20CP1485, X20CP1485-1 and X20CP1486

X20CP348x

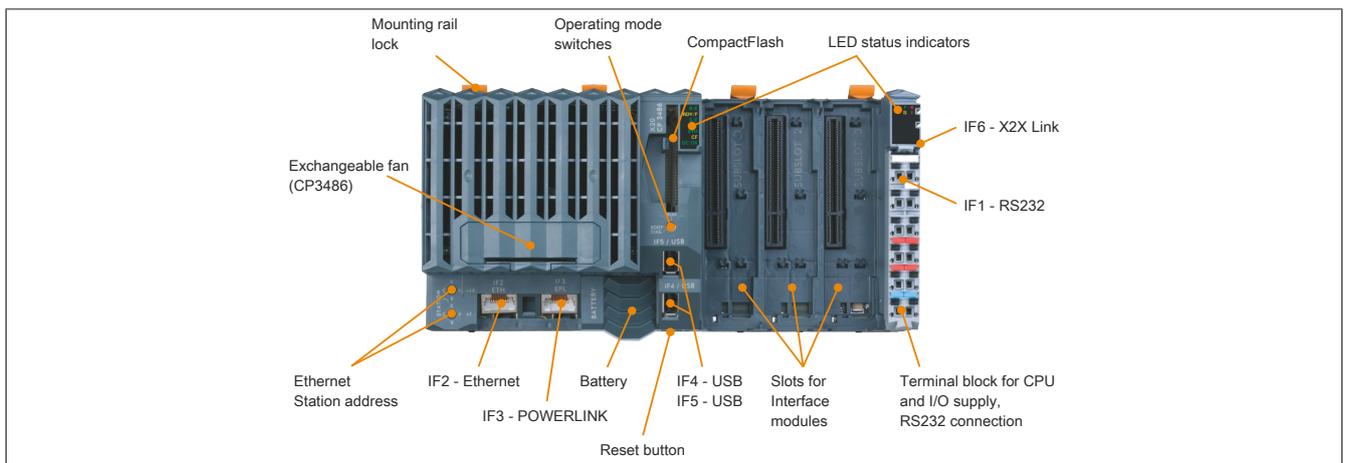


Figure 2: X20 CPUs - Operating elements for X20CP3484, X20CP3484-1, X20CP3485, X20CP3485-1 and X20CP3486

9 Slot for application memory

Program memory is required to operate the CPUs. The program memory is CompactFlash. It is not included with the delivery of the CPUs, instead it must be ordered as an accessory.

Information:

The CompactFlash card cannot be removed during operation.

10 Operating Mode Switch

An operating mode switch is used to set the operating mode.



Figure 3: X20 CPUs - Operating mode switch

Switch position	Operating mode	Description
BOOT	Boot	In this switch position the default B&R Automation Runtime (AR) is started, and the runtime system can be installed using the online interface (B&R Automation Studio). The User Flash is deleted after the download begins.
RUN	Run	RUN mode
DIAG	Diagnostics	The CPU boots in diagnostics mode. Program sections in User RAM and User FlashPROM are not initialized. After Diagnostics mode, the CPU always boots with a warm restart.

Table 14: X20 CPUs - Operating modes

11 Reset button

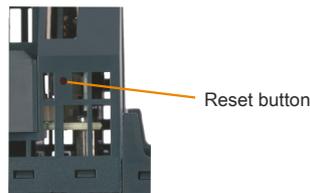


Figure 4: X20CPUs - Reset button

The reset button is located below the USB ports on the bottom of the housing. It can be pressed with any small pointed object (e.g. paper clip). Pressing the reset button triggers a hardware reset, which means:

- All application programs are stopped
- All outputs are set to zero

The PLC then boots into Service mode by default. The boot mode that follows after pressing the reset button can be defined in Automation Studio.

12 CPU supply

A power supply comes integrated in the X20 CPUs. It is equipped with a feed for the CPU, the X2X Link, and the internal I/O supply. The feed to the CPU/X2X Link supply is electrically isolated.

Redundancy of the X2X Link supply possible by parallel operation of multiple supply modules.

Pinout

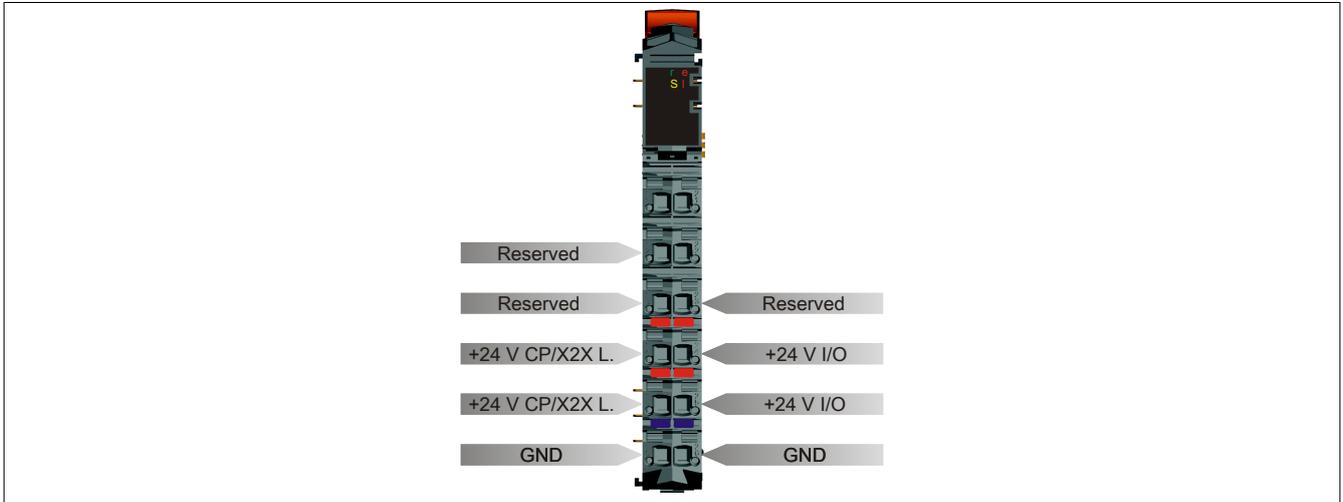


Figure 5: X20 CPUs - Pinout - Integrated power supply

Connection examples

With two separate supplies

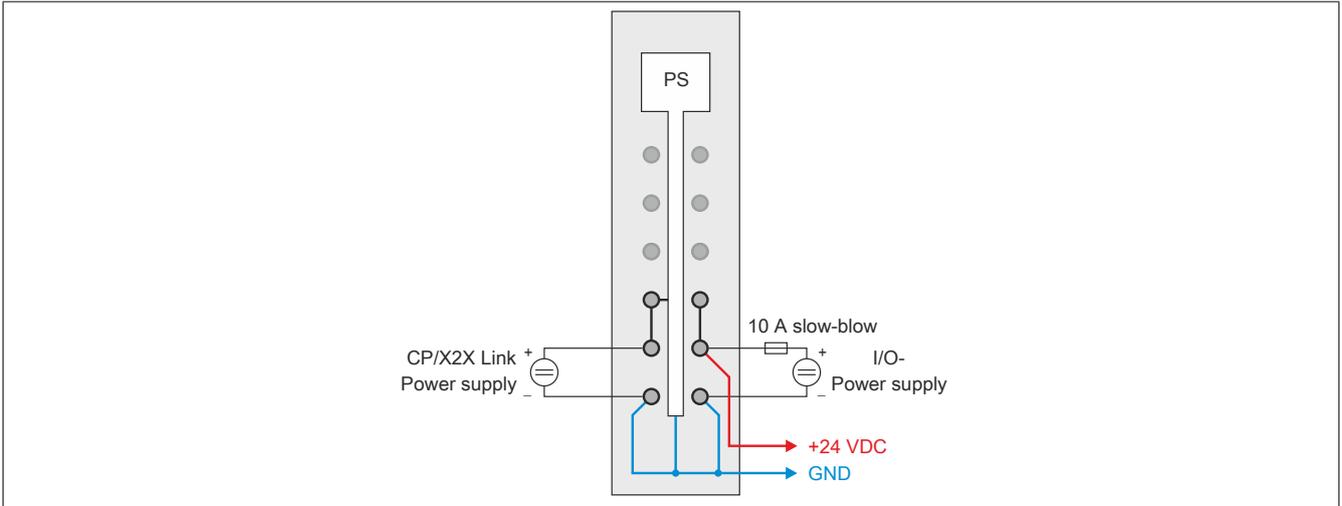


Figure 6: X20 CPUs - Connection example with two separate supplies

With a supply and jumper

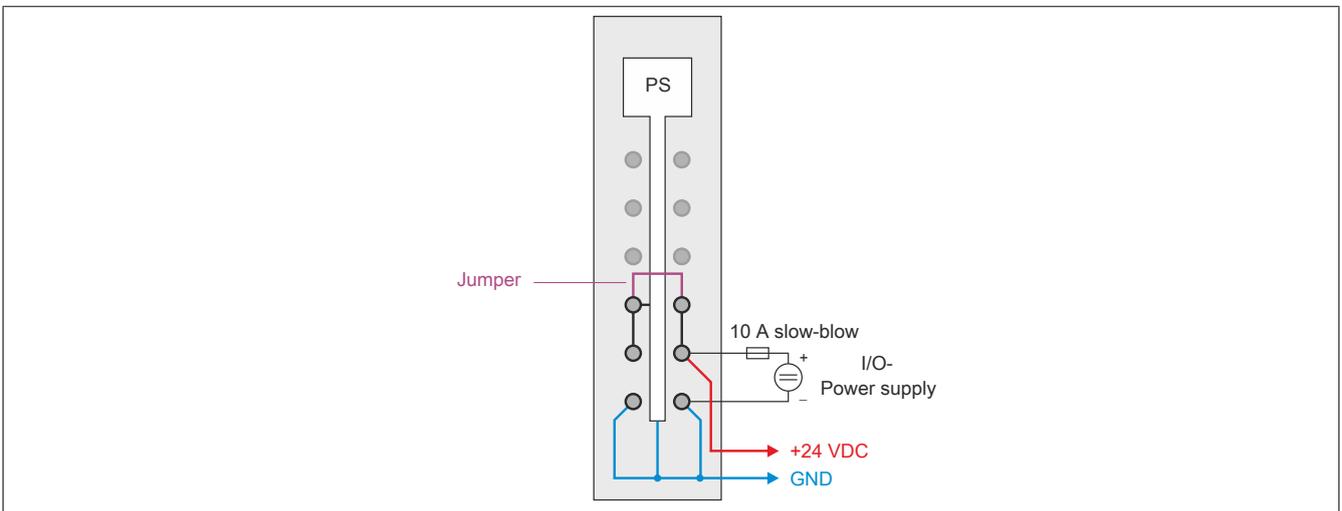


Figure 7: X20 CPUs - Connection example with a supply and jumper

13 RS232 interface (IF1)

The RS232 interface is not electrically isolated. It can be used as an online interface for communicating with the programming device.

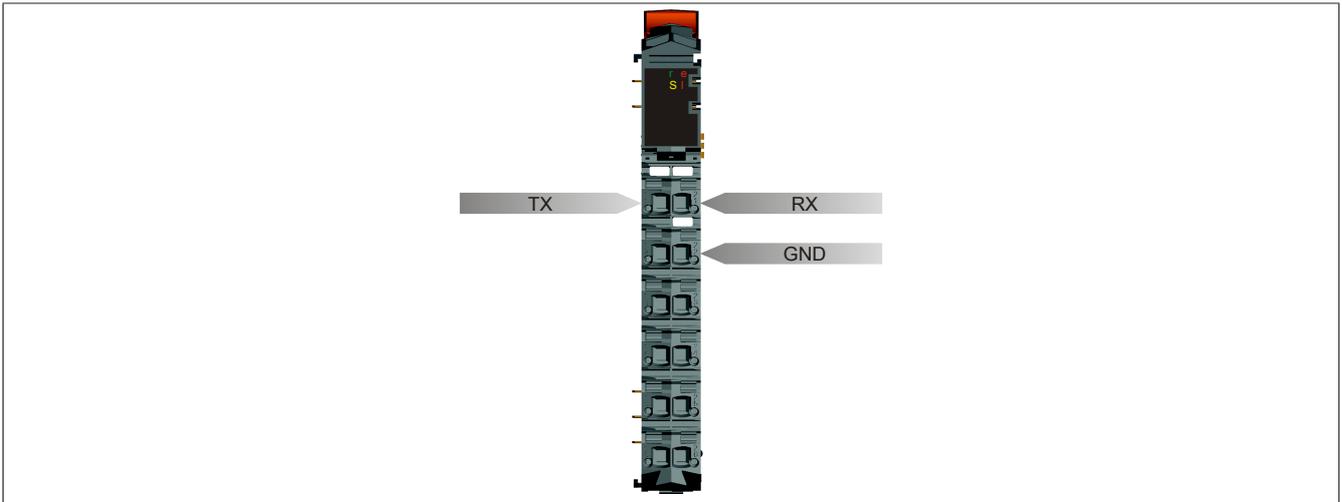


Figure 8: X20 CPUs - Pinout - RS232 interface (IF1)

14 Ethernet interface (IF2)



Figure 9: X20 CPUs - Ethernet interface (IF2)

IF2 is an Ethernet interface. The connection is made using a 10/100 BASE-T Twisted Pair RJ45 socket.

The INA2000 station number for the Ethernet interface is set with both hex switches.

Information:

The Ethernet interface (IF2) is not suited for POWERLINK (see POWERLINK interface IF3).

Pinout

Pin	Assignment	
1	TxD	Transmit data
2	TxD\	Transmit data\
3	RxD	Receive data
4	Termination	
5	Termination	
6	RxD\	Receive data\
7	Termination	
8	Termination	

Table 15: X20 CPUs - Pinout - Ethernet interface (IF2)

15 POWERLINK interface (IF3)

POWERLINK V1

Station numbers are permitted between 0x00 and 0xFD. The station number can be set using software.

Switch position	Description
0x00	Operation as managing node.
0x01 - 0xFD	Station number of the POWERLINK station. Operation as controlled node.
0xFE - 0xFF	Reserved, switch position is not permitted.

Table 16: X20 CPUs - Station number POWERLINK V1

POWERLINK V2

Station numbers are permitted between 0x01 and 0xF0. The station number can be set using software.

Switch position	Description
0x00	Reserved, switch position is not permitted.
0x01 - 0xEF	Station number of the POWERLINK station. Operation as controlled node.
0xF0	Operation as managing node.
0xF1 - 0xFF	Reserved, switch position is not permitted.

Table 17: X20 CPUs - Station number POWERLINK V2

Ethernet mode

Starting with Automation Studio Version V 2.5.3 and with Automation Runtime V 2.90, the interface can be operated as an Ethernet interface.

The INA2000 station number can be set using the B&R Automation Studio software.

Pinout



Figure 10: X20 CPUs - POWERLINK interface (IF3)

Pin	Assignment	
1	RxD	Receive data
2	RxD\	Receive data\
3	TxD	Transmit data
4	Termination	
5	Termination	
6	TxD\	Transmit data\
7	Termination	
8	Termination	

Table 18: X20 CPUs - Pinout for POWERLINK interface (IF3)

16 USB ports (IF4 and IF5)



Figure 11: X20 CPUs - USB ports (IF4 and IF5)

IF4 and IF5 are USB ports. The connection is made using a USB 1.1 interface.

The USB ports can only be used for devices which have been released by B&R (e.g. floppy disk drive, DiskOnKey or dongle).

Information:

The USB ports cannot be used as online communication interfaces.

17 Slots for interface modules

The CPUs are equipped with one or three slots for interface modules.

The X20 system can be connected to various bus or network systems by selecting the appropriate interface modules.

18 Exchangeable fan

The X20 CPUs CP1486 and CP3486 are delivered with exchangeable fans. Therefore, they can be used throughout the full temperature range from 0 - 55°C. A fan is not necessary up to 45°C.

A replacement fan can be ordered using the order number X20AC0EF1.

Changing the fan

- 1) Press in fan lock with thumb and pull out fan.
- 2) Insert new fan into CPU until the lock clicks into place.



Figure 12: X20 CPUs - Tool-free fan replacement

19 Over-temperature shut-off

To prevent damage, a shut-off/reset is triggered when the CPU reaches 100°C.

The following errors are entered in the log book:

Error number	Error description
9204	WARNING: System halted because of temperature check
9210	WARNING: Boot by watchdog or manual reset

Table 19: X20 CPUs - Log book entries for overtemperature shut-off

20 Data / real-time buffering

The CPUs are equipped with a backup battery. The following areas are buffered:

- Remanent variables
- User RAM
- System RAM
- Real-time clock

Battery monitoring

The battery voltage is checked cyclically. The cyclic load test of the battery does not considerably shorten the battery life, instead it gives an early warning of weakened buffer capacity.

The status information "Battery OK" is available from the system library function "BatteryInfo" and the CPU's I/O mapping.

Battery change interval

The battery should be changed every 4 years. The change intervals refer to the average life span and operating conditions and are recommended by B&R. It is not the maximum buffer duration.

21 Changing the Lithium battery

The CPUs are equipped with a lithium battery. The lithium battery is placed in a separate compartment and protected by a cover.

Backup battery data

Model number 4A0006.00-000 0AC201.91	1 piece 4 pieces
Short description	Lithium battery, 3 V / 950 mAh, button cell
Storage temperature	-20 to 60°C
Storage time	Max. 3 years at 30°C
Relative humidity	0 to 95%, non-condensing

Table 20: X20 CPUs - backup battery data

Important information about the battery exchange

The product design allows the battery to be changed with the PLC switched either on or off. In some countries, safety regulations do not allow batteries to be changed while the module is switched on. To prevent data loss, the battery must be changed within 1 min. with the power off.

Warning!

The battery must be replaced with a Renata, type CR2477N battery only. Use of another battery may present a risk of fire or explosion.

Battery may explode if handled improperly. Do not recharge, disassemble or dispose of in fire.

Procedure for changing the battery

1. Touch the mounting rail or ground connection (not the power supply!) in order to discharge any electrostatic charge from your body.
2. Remove the cover for the lithium battery. To do this, slide the cover down from the CPU.



Figure 13: X20 CPUs - Removing the cover for the lithium battery

3. Remove the battery from the holder (do not use pliers or uninsulated tweezers -> risk of short circuiting). The battery should not be held by its edges. **Insulated** tweezers may also be used for removing the battery.

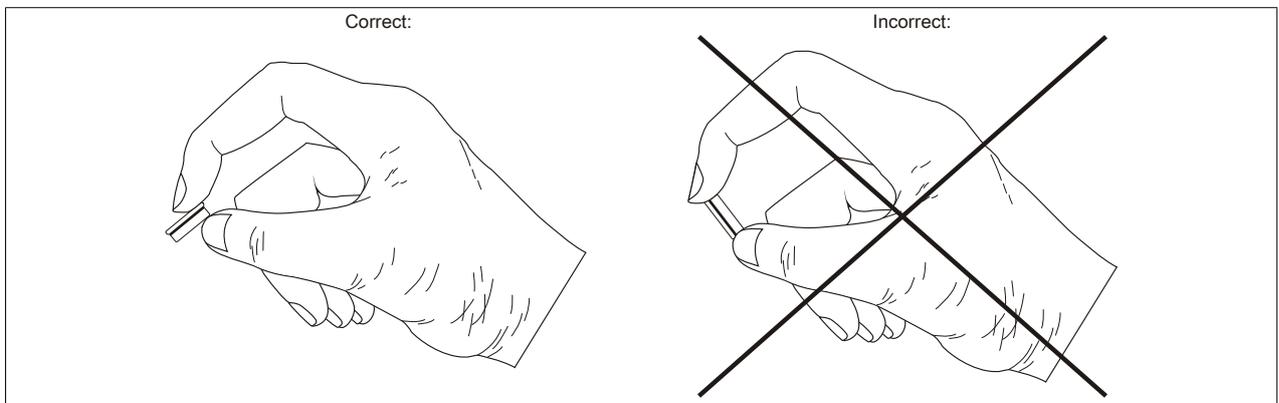


Figure 14: X20 CPUs - Correct grip for the battery

4. Insert the new battery with correct polarity. To do this, the battery is laid with the "+" side up on the right part of the battery holder under the USB port IF4. Then secure the battery in the holder by pressing above the left part of the battery holder.
5. Replace cover.

Information:

Lithium batteries are considered hazardous waste. Used batteries should be disposed of appropriately.

22 Programming the system flash

General information

In order for the application project to be executed on the CPU, the Automation Runtime operating system, the system components and the application project must be installed on the CompactFlash card.

Creating a CompactFlash using a USB card reader

The easiest way to perform an initial installation is by creating a fully programmed CompactFlash card using a USB card reader.

1. Creating and configuring a project in Automation Studio
2. In Automation Studio, select **Tools / Create CompactFlash**
3. In the dialog box that opens, select a CompactFlash card and then generate it
4. Insert the finished CompactFlash into the CPU and turn on the CPU's supply voltage
5. CPU booting

For details about commissioning: See Help system under "Automation Software - Getting Started"

Installation via online connection

The CPUs are delivered with a default B&R Automation Runtime (with limited functions) already installed. This runtime system is started in Boot mode (operating mode switch in the BOOT position or no CompactFlash / invalid CompactFlash inserted). It initializes the Ethernet interface and onboard serial RS232 interface, making it possible to download a new runtime system.

1. Insert the CompactFlash card and switch on the power to the CPU. When the switch is in the BOOT position, a new or invalid CompactFlash card starts the CPU with the default B&R Automation Runtime system.
2. Establish a physical online connection between programming device (PC or industrial PC) and CPU (e.g. over an Ethernet network or via the RS232 interface).
3. Before you can establish an online connection via Ethernet, the CPU must be assigned an IP address. In Automation Studio, go to **Online / Settings** and click on the **Browse Targets** button to search for B&R targets on the local network. The CPU should appear on the list. If the CPU hasn't already received an IP address from a DHCP server, right-click on it and select **Set IP Parameters** from the shortcut menu. In the dialog box that opens you can make all the necessary network configurations temporarily (should be identical to the settings in the project).
4. Configure online connection in B&R Automation Studio. For details about the configuration: See Help system under "Automation Software - Communication - Online communication"
5. Start the download procedure by selecting the **Services** command from the **Project** menu. Select **Transfer Operating System...** from the menu that appears. Now follow the instructions from B&R Automation Studio.